

TOYOTA

SERVICE BULLETIN

TOYOTA MOTOR SALES, U.S.A., INC.

VOLUME
10

REFERENCE AUDIO
NUMBER 010
DATE 09-29-89
MODEL ALL MODELS

Page 1 of 1

1989 AUDIO ANTI-THEFT SECURITY SYSTEM

The following procedure will identify if an inoperative anti-theft radio is in a security code lock-out.

Condition: All audio functions inoperative (dead unit)


PROCEDURE:

Check Display:
– Ignition switch is on "ACC."
– Push the "PWR VOL" knob.

Display: Blank



2 Din Type

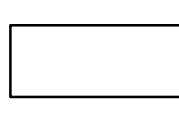

1 Din Type

No

Not a security code lock-up

- Use the radio checker to isolate the problem which may be at the connector, wire harness or the unit itself.

Yes

Hold the "1" (PROG), "4" (SKIP), and "6" buttons and simultaneously push and hold the "PWR VOL" knob.

Display:



2 Din Type



1 Din Type

No

Not a security code lock-up

- Check the battery, fuses and wires associated with the power source to the radio.

Security code lock-out:

- Unit must be returned to an authorized service center.
- Advise the customer that an incorrect security code input procedure has occurred.
- Explain the correct security code input procedure to the customer.