



# TECHNICAL SERVICE BULLETIN

**REF.:** AUDIO  
**NO.:** AU92-002  
**DATE:** AUGUST 14, 1992  
**MODEL:** ALL MODELS


## 74100 PANASONIC CASSETTE PLAYER WON'T PLAY

Page 1 of 2

### CONDITION:

Cassette will load, fast forward/rewind and eject, but will not play on Panasonic 74100 cassette player (P/N 08690 – 008818). The motor is operating, but there is little or no audio output.

### Panasonic 74100

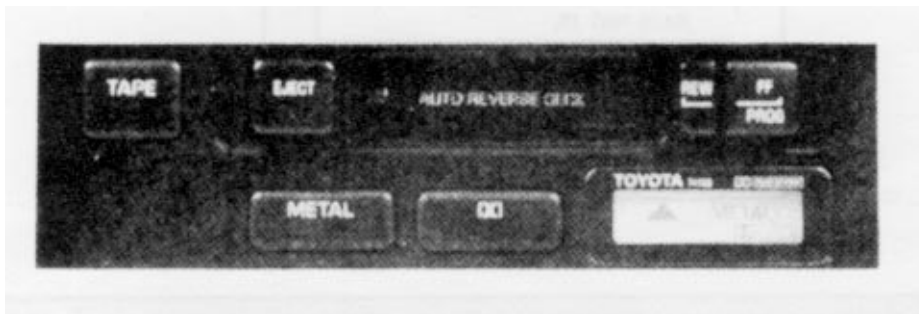

### CAUSE:

Gear mechanism which controls the tape head becomes inoperative, preventing the tape head from contacting the cassette tape.

### CORRECTIONS:

The gears controlling the tape head have been changed to improve durability.

### PRODUCTION CHANGE INFORMATION:

Production change was made 11/91:


Model Number	Part Number	Starting Audio Chassis Serial Number
74100	08690 – 00818	80351 –

TOYOTA MOTOR SALES U.S.A., INC.

# 74100 PANASONIC CASSETTE PLAYER WON'T PLAY

If a customer complains of this condition, exchange the cassette player through Panasonic's exchange system.

Exchange units have been countermeasured starting 12/91 and will have a **GREEN DOT** after the serial number.

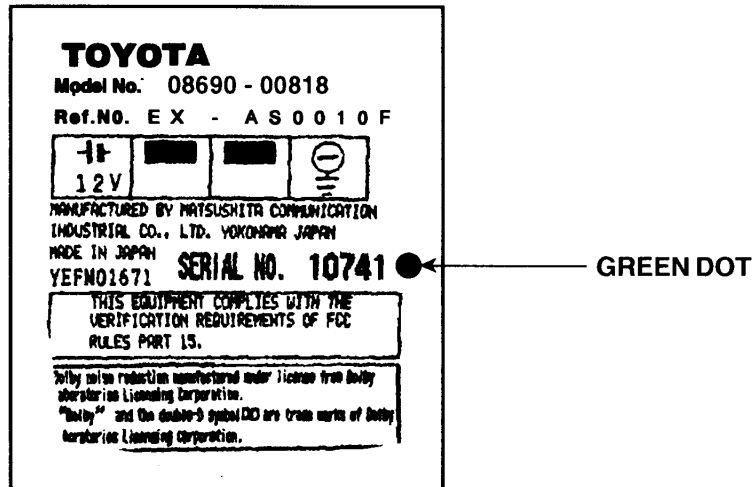

**RETURN EXCHANGED CASSETTE PLAYER AS SOON AS POSSIBLE.**