


# Back Door Handle Garnish Loose or Broken

**Service Category** Vehicle Exterior

**Section** Exterior Panels/Trim

**Market** USA

Scion Supports  
 ASE Certification 

## Applicability

YEAR(S)	MODEL(S)	ADDITIONAL INFORMATION
2005 – 2010	tC	Plant Code(s): 0 WMI(s): JTK

## Introduction

Some 2005 – 2010 model year tC vehicles may exhibit a condition where the back door handle garnish becomes loose, or in some cases may break if used when the garnish is loose. An improved back door handle garnish has been developed to correct this condition. Please follow the procedure contained in this bulletin to replace the back door handle garnish.

## Production Change Information

This TSB applies to vehicles produced **BEFORE** the Production Change Effective VINs shown below.

MODEL	PLANT	PRODUCTION CHANGE EFFECTIVE VIN
tC	Tsutsumi	JTKDE3B7#A0305859

## Warranty Information

OP CODE	DESCRIPTION	TIME	OFF	T1	T2
BD9058	R & R Garnish Sub-Assembly	0.4	76801-21070-##	62	12

### APPLICABLE WARRANTY

- This repair is covered under the Toyota Comprehensive Warranty. This warranty is in effect for 36 months or 36,000 miles, whichever occurs first, from the vehicle's in-service date.
- Warranty application is limited to occurrence of the specified condition described in this bulletin.

## Back Door Handle Garnish Loose or Broken

### Parts Information

PREVIOUS PART NUMBER	CURRENT PART NUMBER	PART NAME	QTY
76801-21070-##	76801-21071-##	Garnish Sub-Assembly, Back Door, Outside	1
90179-05032	90080-17189	Nut	4

### Required Tools & Equipment

SPECIAL SERVICE TOOLS (SST'S)	PART NUMBER	QTY
Plastic Pry Tool Set*	<a href="#">00002-06000-01</a>	1

\* Essential SST.


**NOTE**

Additional SSTs may be ordered by calling 1-800-933-8335.

### Repair Procedure

- Using a plastic pry tool, detach the 8 claws and remove the back door garnish center.

Figure 1.

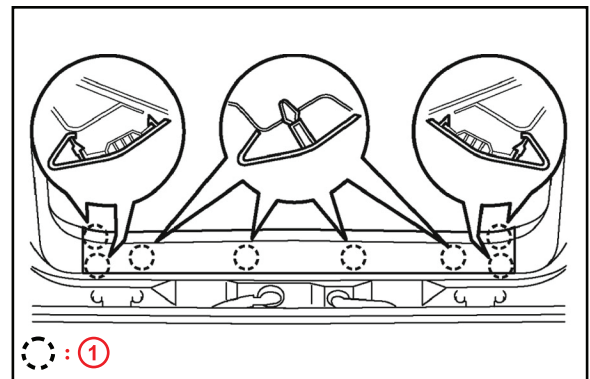


1	Claws
---	-------

## Back Door Handle Garnish Loose or Broken

### Repair Procedure (Continued)

2. Using a plastic pry tool, detach the 7 claws and remove the left and right hand side back door garnish.


Figure 2.

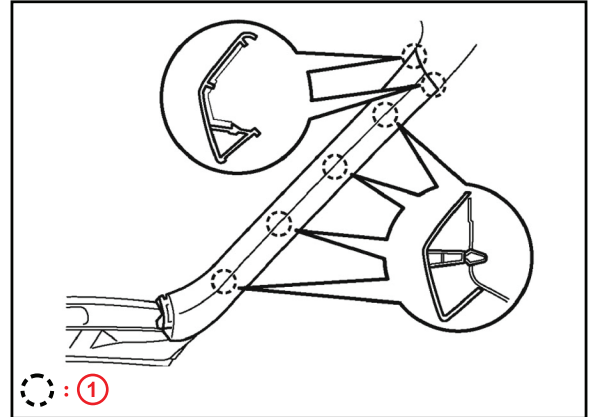

<b>1</b>	<b>Claws</b>
----------	--------------

3. Remove the back door trim board assembly.
  - A. Remove the 2 screws.
  - B. Using a plastic pry tool, detach the two upper clips.
  - C. Using a plastic pry tool, remove the 9 lower clips and remove the back door trim board assembly.

Figure 3.

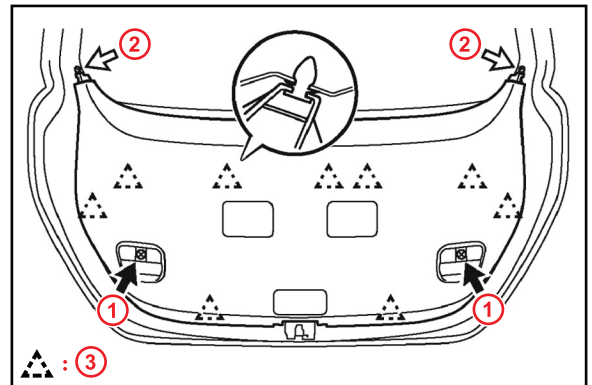


<b>1</b>	<b>Screws</b>
<b>2</b>	<b>Upper Clips</b>
<b>3</b>	<b>Lower Clips</b>

## Back Door Handle Garnish Loose or Broken

### Repair Procedure (Continued)

4. Remove the back door outside garnish sub-assembly.
  - A. Remove the 4 nuts.
  - B. Detach the clip and disconnect the connector. Then remove the garnish.


Figure 4.

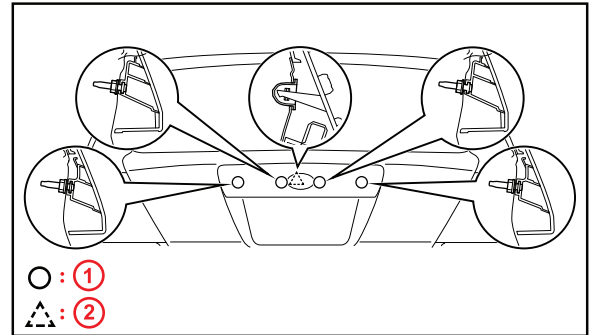

<b>1</b>	<b>Nuts</b>
<b>2</b>	<b>Clip</b>

5. Remove the 2 screws and the opener switch.

Figure 5.

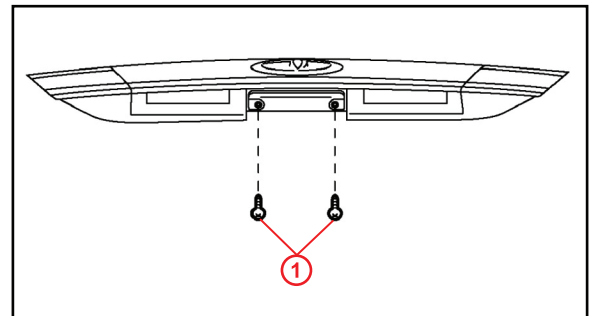

<b>1</b>	<b>Screws</b>
----------	---------------

6. Install the 2 screws and the opener switch in the NEW back door garnish sub-assembly (P/N 76801-21070).
7. Install the back door outside garnish sub-assembly.
  - A. Install the back door outside garnish sub-assembly.
  - B. Install the 4 new nuts (P/N 90080-17189).
8. Reassemble vehicle in reverse order of disassembly steps 1 – 5.