



Technical Service BULLETIN

September 3, 1999

Title:

ECHO FUSE INSTALLATION DURING PDS

Models:

'00 ECHO

PRODUCT GENERAL INFORMATION
PG028-99

Introduction To minimize battery discharge during transportation and storage, the Dome fuse has been removed at the assembly plant.

Affected Systems

Removal of the Dome fuse will affect the following systems:


- Clock
- Key Reminder Buzzer
- Wireless Door Lock Control
- Luggage Compartment Light
- Open Door Warning Light
- Interior Light
- Light Reminder Buzzer
- Theft Deterrent System
- Headlight High Beam Indicator
- Radio and CD Player

Applicable Vehicles

- 2000 MY ECHO.


Installation Procedure

1. The Dome fuse (15A) is stored in the blank space of the Relay Block in the Engine Compartment.

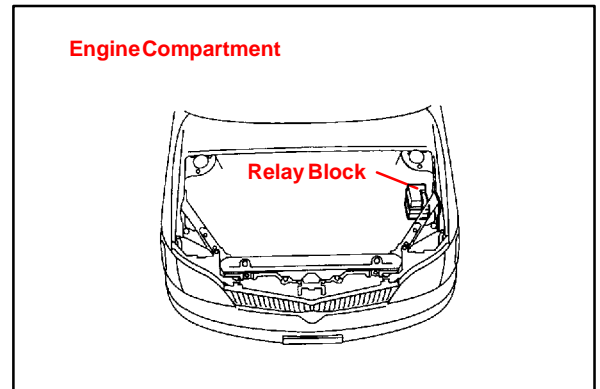

2. During Pre-Delivery Service (PDS) install the Dome fuse in the Relay Block as shown.

NOTE:
If the vehicle is stored at the dealership for a long period of time after PDS, disconnect the negative battery terminal to prevent battery discharge. Refer to TSB EL001-96 for battery maintenance information.

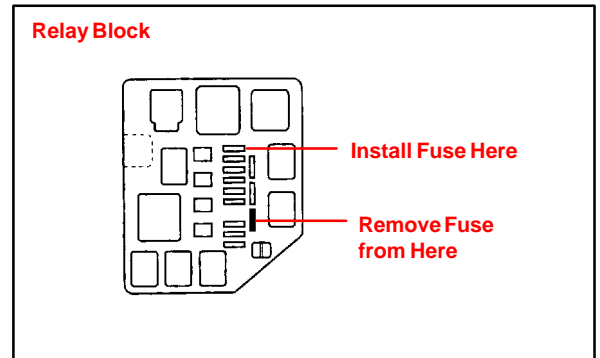

Warranty Information

OP CODE	DESCRIPTION	TIME	OPN	T1	T2
N/A	Not Applicable to Warranty	-	-	-	-

