



**Technical Service
BULLETIN**

December 12, 2006

Title:

**REPAIR MANUAL SUPPLEMENT:
DAYTIME RUNNING LIGHTS**

Models:



'03 – '07 4Runner

ELECTRICAL
EL014-06

Introduction This bulletin contains the procedure for deactivating Daytime Running Lights (DRL) on 2003 – 2007 model year 4Runner vehicles with the DRL factory option.

- Applicable Vehicles**
- **2003 – 2007** model year **4Runner** vehicles equipped with the **DRL factory option** (RL accessory code).

**Required
SSTs**

ITEM NO.	SPECIAL SERVICE TOOLS (SSTs)	PART NUMBER	QTY	DRW**
1	Toyota Diagnostic Tester Kit* NOTE: <ul style="list-style-type: none"> • All components from this kit/set are required. • 12 Megabyte Diagnostic Tester Program Card (P/N 01002593–005) with version 13.4a Software (or later) is required. 	TOY220036	1	9
2	CAN Interface Module Kit* NOTE: <ul style="list-style-type: none"> • All components from this kit/set are required. 	01002744	1	9

* Essential SSTs.

** Drawer number in SST Storage System.

NOTE:

Additional Diagnostic Tester Kits, CAN Interface Modules, Program Cards, or other SSTs may be ordered by calling SPX/OTC at 1-800-933-8335.


**Warranty
Information**

OP CODE	DESCRIPTION	TIME	OFF	T1	T2
N/A	Not Applicable to Warranty	–	–	–	–




Activation Procedure


1. Connect the Diagnostic Tester to the DLC3 and turn the ignition switch to the “ON” position.

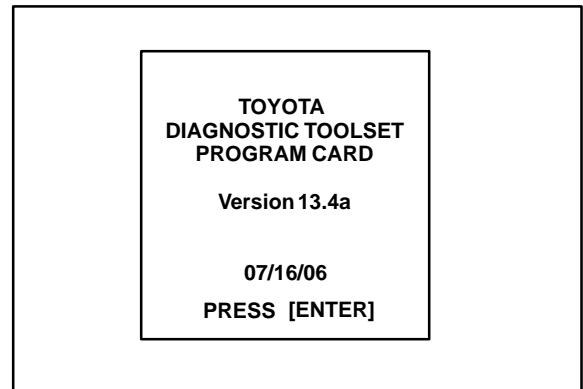


2. In the “APPLICATION SELECT” screen, choose option 2, “CUSTOMIZE”.

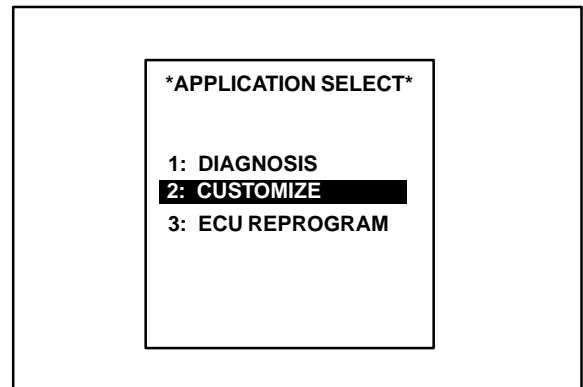

3. In the “VEHICLE SELECT” screen, choose “NEW VEHICLE” and enter the year and model, followed by the “YES” button.

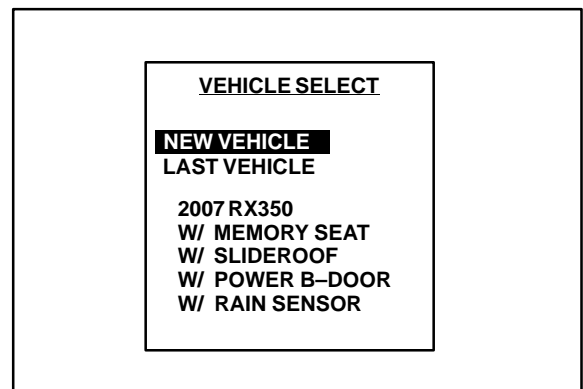


4. In the “Verify Connections” screen, press the “YES” button.

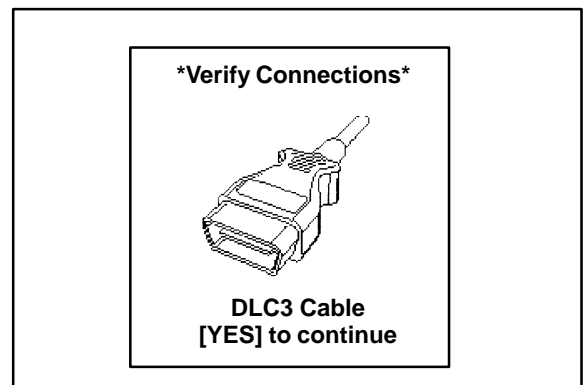


**Activation
Procedure**
(Continued)


5. in the “CUSTOMIZE MENU” screen, select option 1, “INDIVIDUAL CHANGE”.
6. In the NOTICE screen, press the ENTER button.

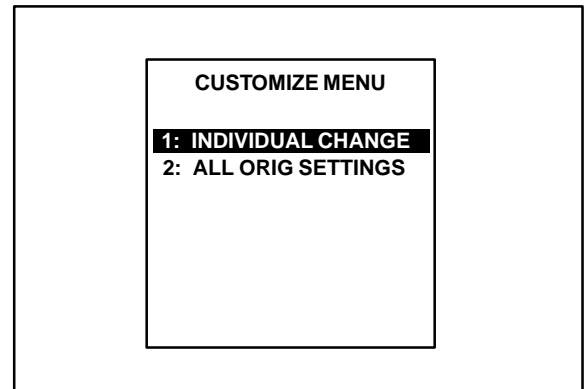


7. In the “FUNCTION SELECT” screen, select option 6, “LIGHT CONTROL”.

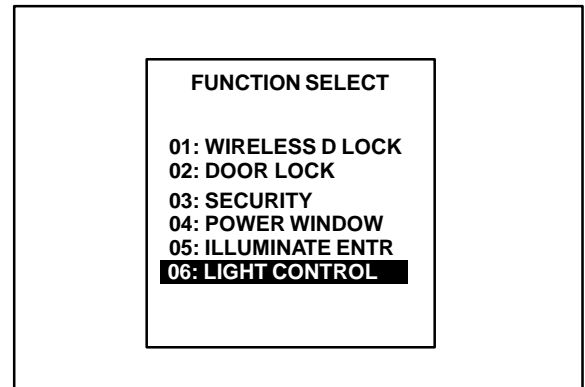


8. In the “ITEM SELECT LIGHT CONTROL” screen, select option 3, “DRL FUNCTION”.

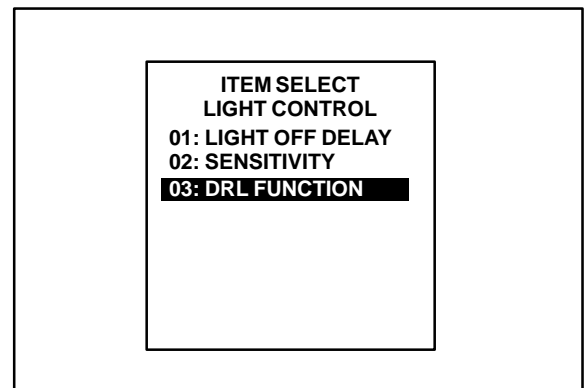

9. In the “CUSTOMIZE DRL FUNCTION” screen, select option 1, “OFF,” and press “ENTER”.

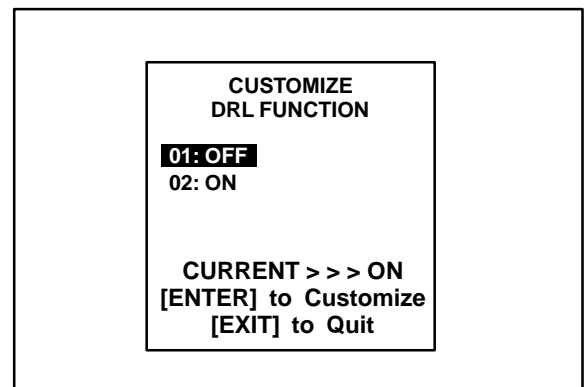

- Activation Procedure**
(Continued)
10. In the “SETTING CHANGE DRL FUNCTION” screen, press the “YES” button.

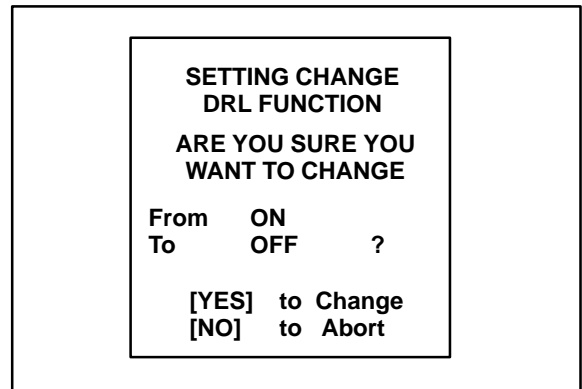

11. Verify that the Daytime Running Lights (DRL) have been deactivated.

