

# Transmission Fluid or Gear Oil Seepage from Transfer Case Vent (AWD)

**Service Category** Drivetrain

**Section** Transfer/4wd/Awd

**Market** USA

Toyota Supports  
 ASE Certification 

## Applicability

YEAR(S)	MODEL(S)	ADDITIONAL INFORMATION
2004 – 2009	Highlander	Drive Type(s): 4WD Engine(s): 3MZ, 2GR, 2AZ Transmission(s): 4AT, 5AT VDS(s): EP21A, ES41A, ES42A, ES43A, HD21A, HP21A WMI(s): JTE
2001 – 2005	RAV4	Drive Type(s): 4WD Engine(s): 2AZ, 1AZ Transmission(s): 4AT VDS(s): HD20V, HH20V WMI(s): JTE
2004 – 2010	Sienna	Drive Type(s): 4WD Engine(s): 3MZ, 2GR Transmission(s): 5AT VDS(s): BA22C, BA23C, BK22C, BK23C, DK4CC, JK4CC WMI(s): 5TD

### TSB SUPERSESSION NOTICE

The information contained in this TSB supersedes TSB No. TC008-07.

- Applicability has been updated to include 2007 – 2009 Highlander, 2001 – 2005 RAV4, and 2007 – 2010 Sienna vehicles.

TSB No. TC008-07 is Obsolete and any printed versions should be discarded. Be sure to review the entire content of this service bulletin before proceeding.

## Introduction

Some 2004 – 2009 model year Highlander, 2001 – 2005 model year RAV4, and 2004 – 2010 model year Sienna AWD (4WD) vehicles may display a transmission fluid or gear oil seepage from a vent on the right side of the transfer case. The seepage is from the transfer RH (right-hand) bearing retainer No. 2 oil seal. Production improvements have been implemented to prevent this condition from occurring. Follow the repair procedure in this bulletin to replace the RH bearing retainer No. 2 oil seal assembly.

## Transmission Fluid or Gear Oil Seepage from Transfer Case Vent (AWD)

### Production Change Information

This TSB applies to 2001 – 2005 RAV4 and to Highlander and Sienna vehicles produced **BEFORE** the Production Change Effective VINs shown below.

MODEL	PLANT	DRIVETRAIN	PRODUCTION CHANGE EFFECTIVE VIN
Highlander	TMK1	AWD	JTEES4#A#92137597
Sienna	TMMI	AWD	5TD#K4CC#AS028750

### Warranty Information

OP CODE	DESCRIPTION	MODEL YEAR	MODEL	TIME	OFP	T1	T2
TC7004	R & R Transfer RH Bearing Retainer No. 2 Oil Seal	2001–2005	RAV4 (M/T)	11.5	90316-37001	65	57
			RAV4 (A/T)	13.6			
		2004–2006	Highlander (4 cylinder)	9.7			
			Highlander (V6)	10.3			
			Sienna	10.2			
		2007–2009	Highlander (V6)	11.9			
		2007–2010	Sienna	9.3			

#### APPLICABLE WARRANTY

- This repair is covered under the Toyota Powertrain Warranty. This warranty is in effect for 60 months or 60,000 miles, whichever occurs first, from the vehicle's in-service date.
- Warranty application is limited to occurrence of the specified condition described in this bulletin.

### Parts Information

PREVIOUS PART NUMBER	CURRENT PART NUMBER	PART NAME	QTY
90316-37001	Same	Seal, Oil, No. 2 (for Transfer RH Bearing Retainer)	1
90301-70002	Same	Ring, O	1
90311-34021	Same	Seal, Oil, No. 1 (for Transfer RH Bearing Retainer)	1
12157-10010	Same	Gasket	3
90301-11018	Same	Ring, O	1
36141-21010	Same	Gasket, Transfer Cover	1
90366-38020	Same	Bearing, Tapered Roller	1

## Transmission Fluid or Gear Oil Seepage from Transfer Case Vent (AWD)

### Required Tools & Equipment

REQUIRED MATERIAL	CLASSIFICATION	QUANTITY
Transfer Case Oil	Hypoid Gear Oil SAE 90 (GL-5)	0.95 U.S. qts (0.9 liters)
Transmission Fluid	ATF Type T-IV	3.8 U.S. qts (3.6 liters)
	ATF WS	
FIPG Sealant: Three Bond 1281, or equivalent	–	As needed
MP Grease	–	As needed

SPECIAL SERVICE TOOLS (SST'S)	PART NUMBER	QTY
Oil Seal Puller (or equivalent)	<a href="#">09308-00010</a>	1
Transmission Housing Remover*	<a href="#">09520-10021</a>	1
Crankshaft Front Oil Seal Replacer*	<a href="#">09223-46011-01</a>	1
RH Bearing Retainer Installer*	<a href="#">09387-00090</a>	1
Output Shaft Nut Wrench (or equivalent)	<a href="#">09326-20011</a>	1
Bearing Remover (or equivalent)	<a href="#">09950-00020</a>	1
Differential Drive Pinion Holding Tool 28*	<a href="#">09556-16030-01</a>	1
Replacer Set #1* (Replacer 36) (Replacer 54) (Replacer 62) (Adapter)	<a href="#">09950-60010-01</a> ( <a href="#">09951-00360-01</a> ) ( <a href="#">09951-00540-01</a> ) ( <a href="#">09951-00620-01</a> ) ( <a href="#">09952-06010-01</a> )	1
Handle Set* (Handle Assembly 150 – 6.25 inch)	<a href="#">09950-70010-01</a> ( <a href="#">09951-07150-01</a> )	1
Plastic Pry Tool Set*	<a href="#">00002-06000-01</a>	1

\* Essential SST.


**NOTE**

Additional SSTs may be ordered by calling 1-800-933-8335.

# Transmission Fluid or Gear Oil Seepage from Transfer Case Vent (AWD)

## Components

Figure 1.

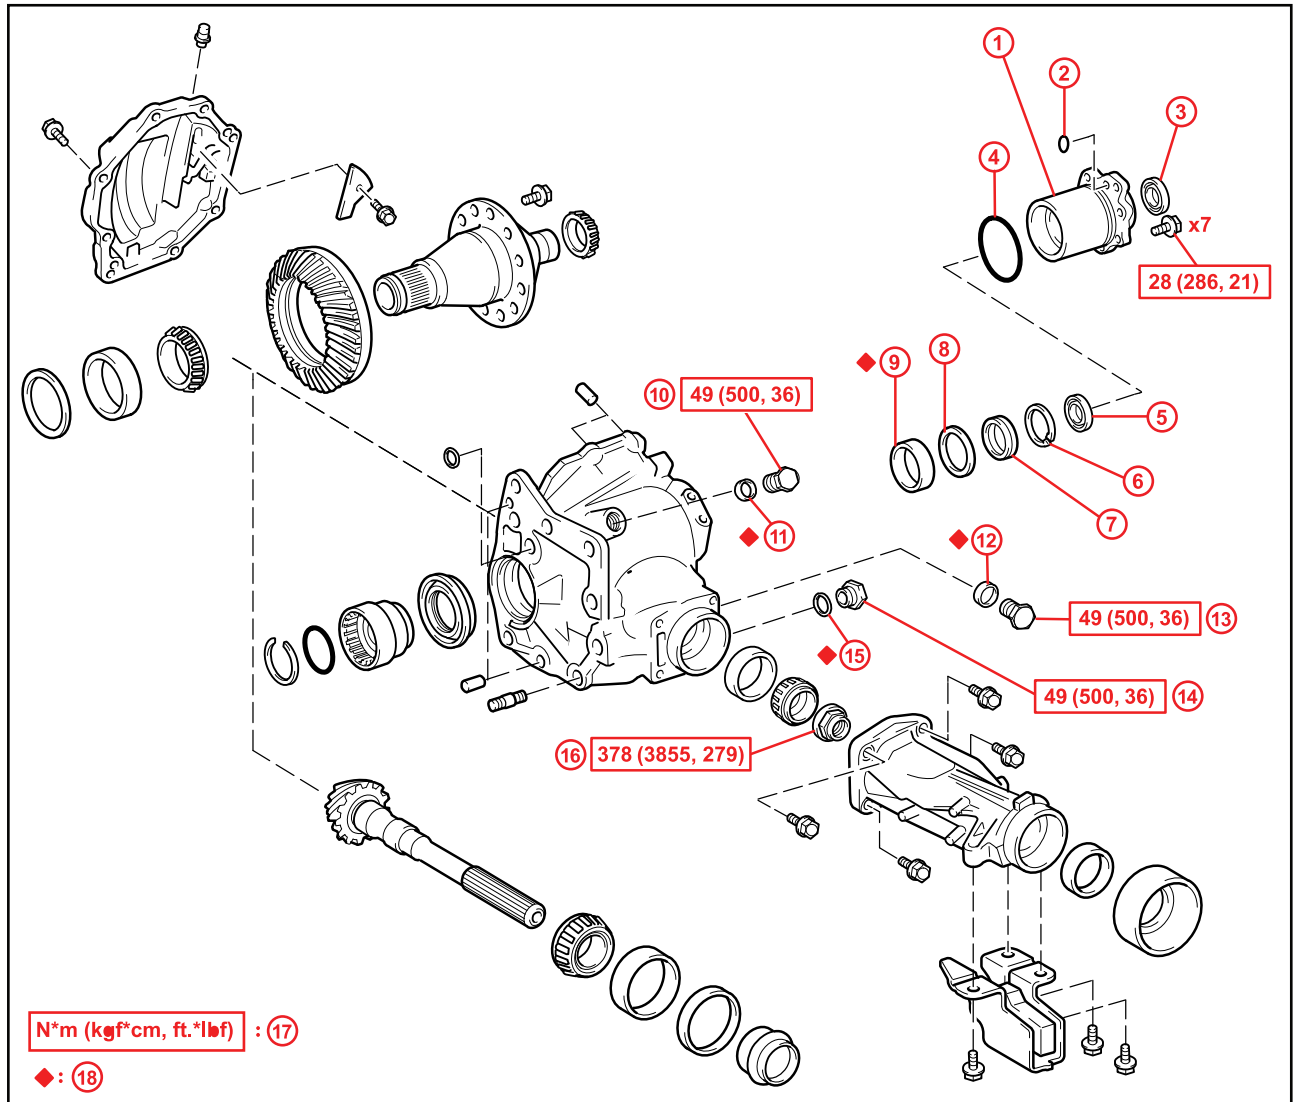

1	RH Bearing Retainer Sub-assembly
2	RH Bearing Retainer O-ring
3	RH Bearing Retainer Oil Seal No. 1
4	O-ring
5	Side Gear Shaft Holder Bearing
6	Snap Ring
7	RH Bearing Retainer Oil Seal No. 2
8	Ring Gear Mounting Case Washer No. 2
9	Center Differential Case Tapered Roller Bearing RH (Outer Race)


10	No. 2 Plug
11	Gasket No. 2
12	Gasket No. 1
13	No. 1 Plug
14	Drain Plug
15	Drain Gasket
16	Lock Nut
17	Specified Torque
18	Non-reusable Part

## Transmission Fluid or Gear Oil Seepage from Transfer Case Vent (AWD)

### Repair Procedure: Removal

1. Confirm source of gear oil/transmission fluid seepage is from vent on RH bearing retainer.

Figure 2.

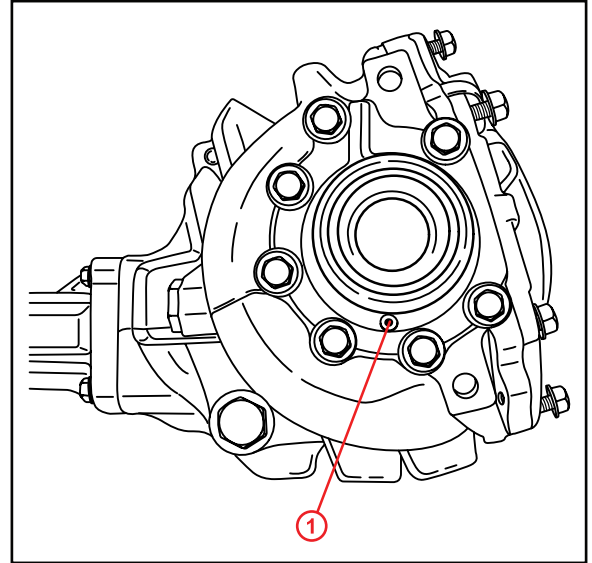

<b>1</b>	Location of Seepage in RH Bearing Retainer (Vent)
----------	---

2. Remove the engine assembly with transaxle.

Refer to the Technical Information System (TIS), applicable model and model year Repair Manual:

- 2004 Highlander:  
*Engine/Hybrid System – Engine Mechanical – [“2AZ-FE / 3MZ-FE: Partial Engine Assy: Replacement”](#)*
- 2005 Highlander:  
*Engine/Hybrid System – Engine Mechanical – [“2AZ-FE / 3MZ-FE: Partial Engine Assy: Replacement”](#)*
- 2006 Highlander:  
*Engine/Hybrid System – Engine Mechanical – [“2AZ-FE / 3MZ-FE Engine Mechanical: Engine Assembly: Removal”](#)*
- 2007 Highlander:  
*Engine/Hybrid System – Engine Mechanical – [“2AZ-FE / 3MZ-FE Engine Mechanical: Engine Assembly: Removal”](#)*
- [2008 / 2009](#) Highlander:  
*Engine/Hybrid System – Engine Mechanical – [“2GR-FE Engine Mechanical: Engine Assembly: Removal”](#)*

## Transmission Fluid or Gear Oil Seepage from Transfer Case Vent (AWD)

---

### Repair Procedure: Removal (Continued)

- [2001](#) / [2002](#) / [2003](#) / [2004](#) / [2005](#) RAV4:  
*Engine/Hybrid System – Engine Mechanical – “Engine Unit: Removal”*
  - [2004](#) / [2005](#) Sienna:  
*Engine/Hybrid System – Engine Mechanical – “3MZ-FE: Partial Engine Assy: Replacement”*
  - [2006](#) Sienna:  
*Engine/Hybrid System – Engine Mechanical – “3MZ-FE Engine Mechanical: Engine Assembly: Removal”*
  - [2007](#) / [2008](#) / [2009](#) / [2010](#) Sienna:  
*Engine/Hybrid System – Engine Mechanical – “2GR-FE Engine Mechanical: Engine Assembly: Removal”*
3. Remove the automatic transmission w/transfer.

Refer to TIS, applicable model and model year Repair Manual:


- 2004 Highlander:  
*Drivetrain – Automatic Transmission/Transaxle – “Automatic Transaxle Assy ([U151E/U151F](#)) / ([U241E/U140F](#)): Replacement”*
- 2005 Highlander:  
*Drivetrain – Automatic Transmission/Transaxle – “Automatic Transaxle Assy ([U151E/U151F](#)) / ([U241E/U140F](#)): Replacement”*
- 2006 Highlander:  
*Drivetrain – Automatic Transmission/Transaxle – “[U140F](#) / [U151F](#) Automatic Transaxle: Automatic Transaxle Assembly: Removal”*
- 2007 Highlander:  
*Drivetrain – Automatic Transmission/Transaxle – “[U140F](#) / [U151F](#) Automatic Transaxle: Automatic Transaxle Assembly: Removal”*
- [2008](#) / [2009](#) Highlander:  
*Drivetrain – Automatic Transmission/Transaxle – “U151F Automatic Transaxle: Automatic Transaxle Assembly: Removal”*
- [2001](#) / [2002](#) / [2003](#) / [2004](#) / [2005](#) RAV4:  
*Drivetrain – Automatic Transmission/Transaxle – “Automatic Transaxle Unit (U140F): Removal”*
- [2004](#) / [2005](#) Sienna:  
*Drivetrain – Automatic Transmission/Transaxle – “Automatic Transaxle Assy (U151E/U151F): Replacement”*
- [2006](#) / [2007](#) / [2008](#) / [2009](#) / [2010](#) Sienna:  
*Drivetrain – Automatic Transmission/Transaxle – “U151F Automatic Transaxle: Automatic Transaxle Assembly: Removal”*

## Transmission Fluid or Gear Oil Seepage from Transfer Case Vent (AWD)

### Repair Procedure: Removal (Continued)

4. Remove the transfer case No. 1 plug and remove the gasket from the plug.


**Figure 3.**

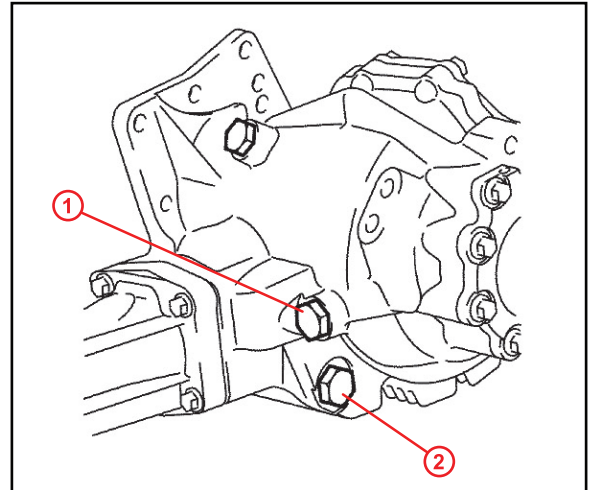

<b>1</b>	<b>No. 1 Plug</b>
<b>2</b>	<b>Drain Plug</b>

5. Remove the transfer drain plug and remove the gasket from the drain plug.
6. Remove the transfer assembly.
  - A. Remove the 2 bolts and 6 nuts.
  - B. Using a plastic hammer, drive out the transfer assembly from the transaxle assembly.

**Figure 4.**

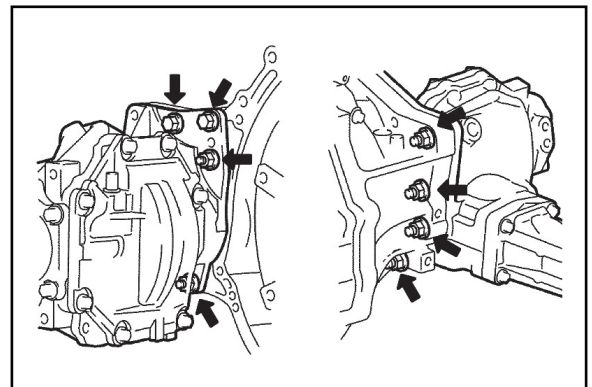

**NOTICE**


- **Disconnect the transfer assembly from the transaxle assembly without tilting.**
- **When moving the transfer assembly, do NOT hold the assembly by the oil seals.**

## Transmission Fluid or Gear Oil Seepage from Transfer Case Vent (AWD)

### Repair Procedure: Removal (Continued)

- Remove the transfer cover gasket from the transfer assembly.

**Figure 5.**

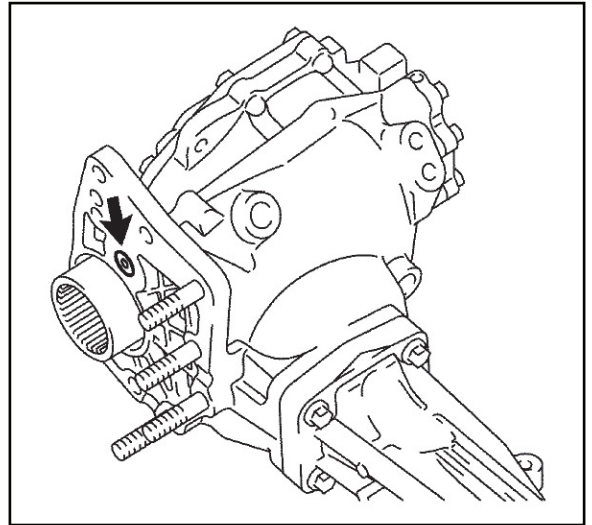


- Using the SST, remove the transfer RH bearing retainer oil seal.

**SST P/N 09308-00010**

**NOTICE**

**Be careful NOT to damage the oil-seal-fitted surface of the retainer.**

**Figure 6.**

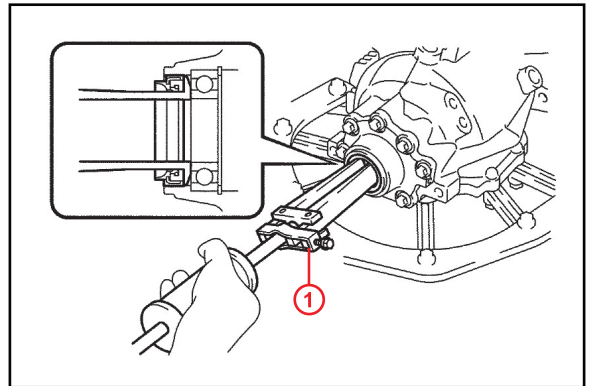

<b>1</b>	<b>SST</b>
----------	------------


## Transmission Fluid or Gear Oil Seepage from Transfer Case Vent (AWD)

### Repair Procedure: Removal (Continued)

9. Remove the transfer RH bearing retainer sub-assembly.

A. Remove the 7 bolts from the RH bearing retainer sub-assembly.


**Figure 7.**

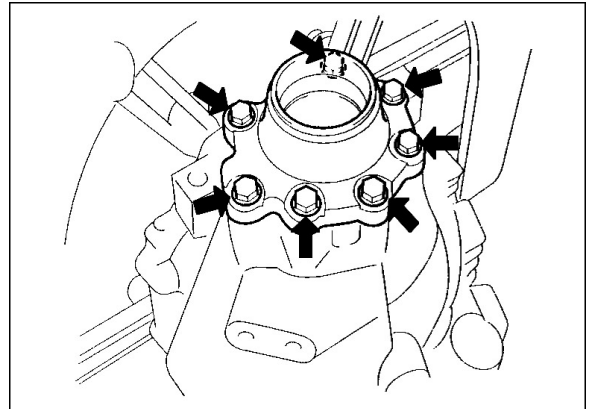

B. Using the SST, make a clearance between the RH bearing retainer sub-assembly and the transfer case.

**Figure 8.**

**SST P/N 09950-00020**

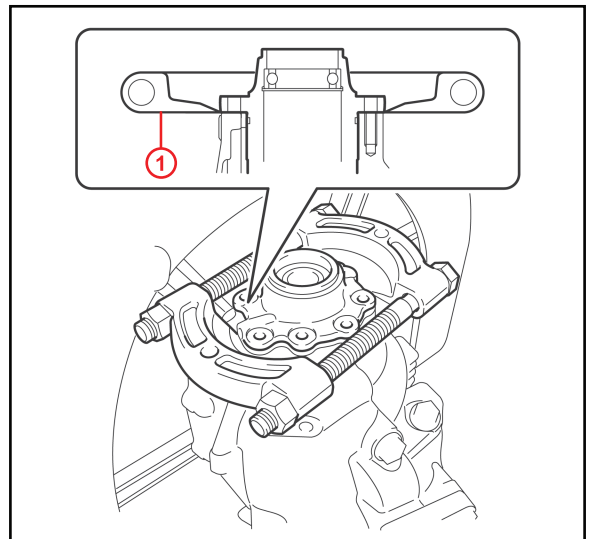

<b>1</b>	<b>SST</b>
----------	------------

C. Remove the SST.



## Transmission Fluid or Gear Oil Seepage from Transfer Case Vent (AWD)

### Repair Procedure: Removal (Continued)

- D. Using the SST, remove the RH bearing retainer sub-assembly from the transfer case.

**SST P/N 09520-10021**

 **Figure 9.**

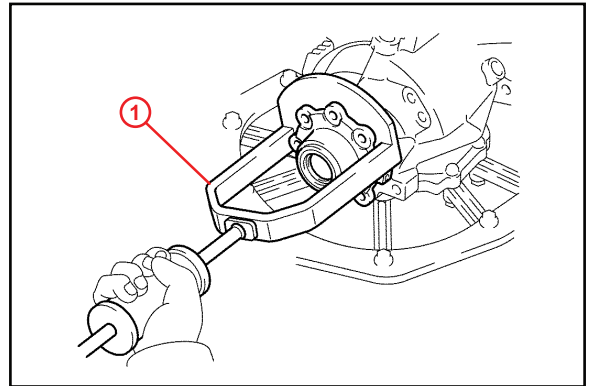


10. Remove the two O-rings.

Using a plastic pry tool or equivalent, remove the two (2) O-rings from the RH bearing retainer.

**NOTICE**

**Be careful NOT to damage the retainer's groove for the O-ring.**

**Figure 10.**

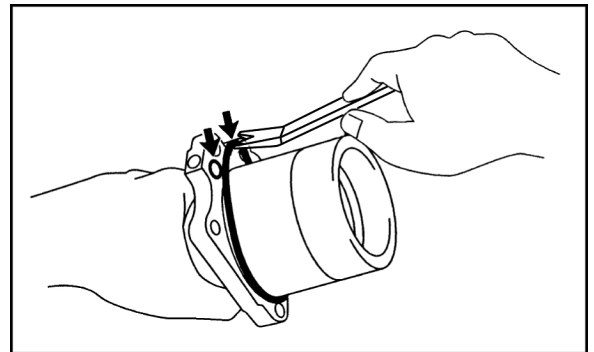

11. Remove the center differential case tapered roller bearing RH (outer race).



- A. Hold the RH bearing retainer in a vise.  
 B. Using the SST, remove the outer race, washer, and No. 2 oil seal from the RH bearing retainer.

**SST P/N 09308-00010**

**NOTICE**

**Be careful NOT to damage the oil-seal-fitted surface of the retainer.**

 **Figure 11.**

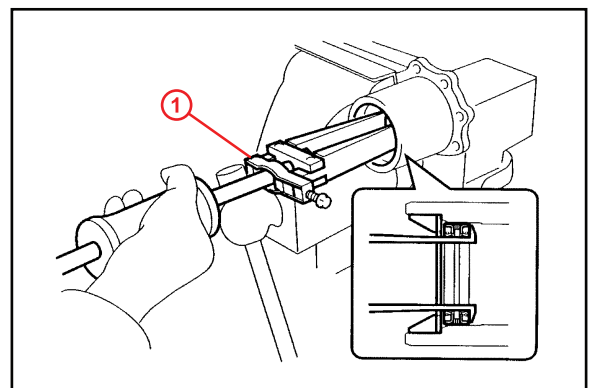

## Transmission Fluid or Gear Oil Seepage from Transfer Case Vent (AWD)

---


### Repair Procedure: Installation

1. Install a NEW No. 2 oil seal in the RH bearing retainer.

**NOTE**

The No. 2 oil seal **MUST** be positioned so that the seal is aligned over the hole located inside the RH bearing retainer. Failure to properly align the seal so that it seals on **BOTH** sides of the hole (vent) will cause the transfer case to leak fluid out of the vent assembly on the RH bearing retainer.

Figure 12.

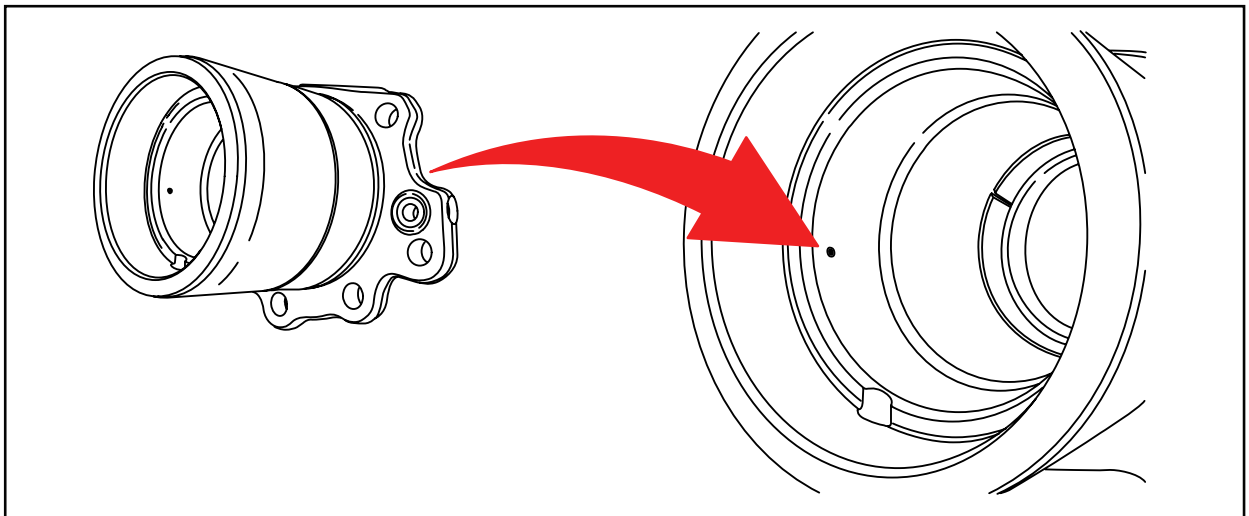

**NOTE**

Only the outer race of the center differential case tapered roller bearing is to be replaced with a **NEW** part. Reuse of the center differential case tapered roller bearing should prevent the requirement to re-adjust driven pinion preload.

## Transmission Fluid or Gear Oil Seepage from Transfer Case Vent (AWD)

### Repair Procedure: Installation (Continued)


2. Install the transfer RH bearing retainer oil seal No. 2.
  - A. Using the SST and a press, install the oil seal No. 2 to the RH bearing retainer.  
**SST P/N 09950-60010 (09951-00360, 09951-00540, 09952-06010), 09950-70010 (09951-07150)**

**NOTE**

Carefully press-fit so that the oil seal is **NOT** tilted.

- B. Apply a small amount of MP grease No. 2 to the oil seal lip.

**Figure 13.**

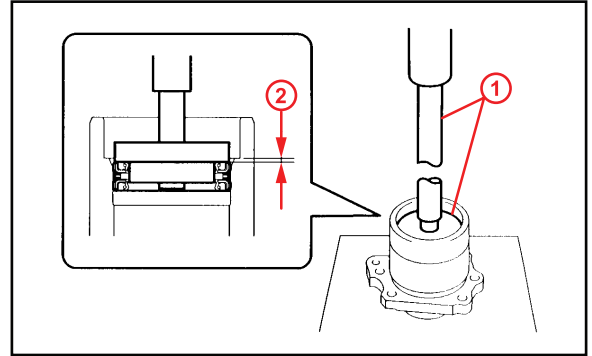


<b>1</b>	<b>SST</b>
<b>2</b>	<b>1.5 – 2.5 mm (0.059 – 0.098 in.)</b>

3. Install the transfer ring gear mounting case washer No. 2 to the RH bearing retainer.
4. Install the center differential case tapered roller bearing.

Using the SST and a press, install the outer race to the RH bearing retainer.

**SST P/N 09950-60010 (09951-00620), 09950-70010 (09951-07150)**

**Figure 14.**

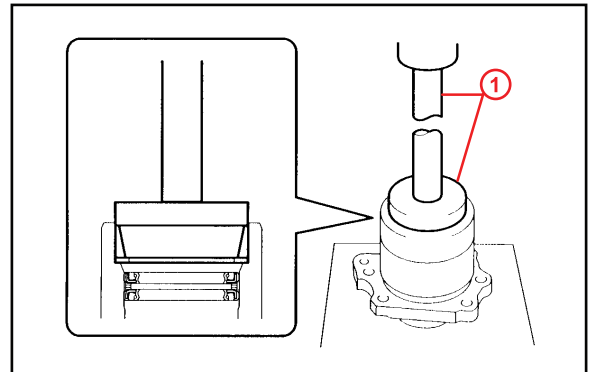

<b>1</b>	<b>SST</b>
----------	------------

## Transmission Fluid or Gear Oil Seepage from Transfer Case Vent (AWD)

---


### Repair Procedure: Installation (Continued)

5. Install the O-rings.
  - A. Apply Hypoid gear oil to the two NEW O-rings.
  - B. Install the two (2) O-rings to the RH bearing retainer.

**NOTICE**


Be careful NOT to twist the O-ring and fit it into the retainer's groove properly.

Figure 15.

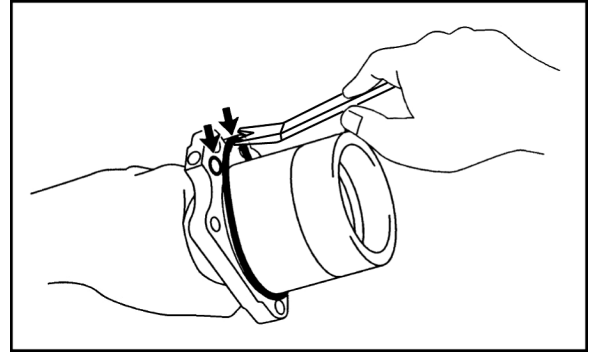

6. Install the transfer RH bearing retainer sub-assembly.
  - A. Place the transfer case with the face where the RH bearing retainer is to be installed facing up, as shown in the illustration.

Figure 16.

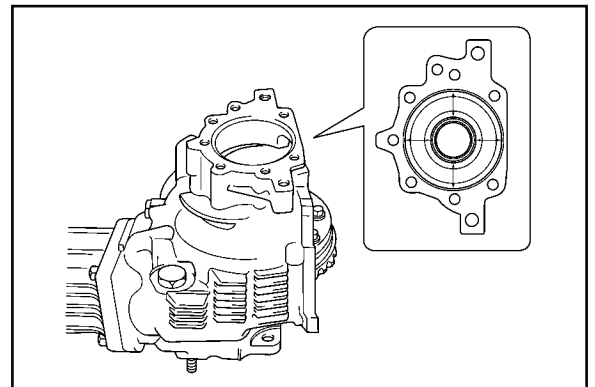

- B. Center-align the center differential control coupling assembly and the case.

## Transmission Fluid or Gear Oil Seepage from Transfer Case Vent (AWD)


### Repair Procedure: Installation (Continued)

- C. Apply MP grease No. 2 thinly to area A as shown in the illustration.

**HINT**

Apply MP grease No. 2 to prevent the oil seal lip from rolling back.

Figure 17.

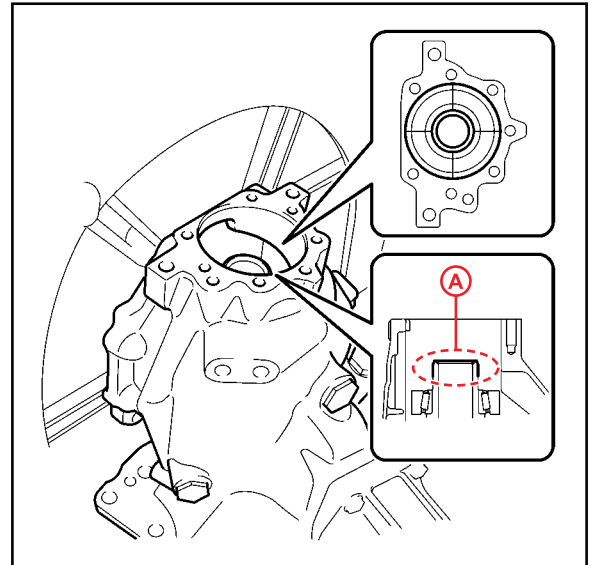

1 Area A


- D. Insert the SST into the transfer RH bearing retainer sub-assembly.

SST P/N 09387-00090

**NOTICE**

Insert the SST straight in order NOT to damage the oil seal.

Figure 18.

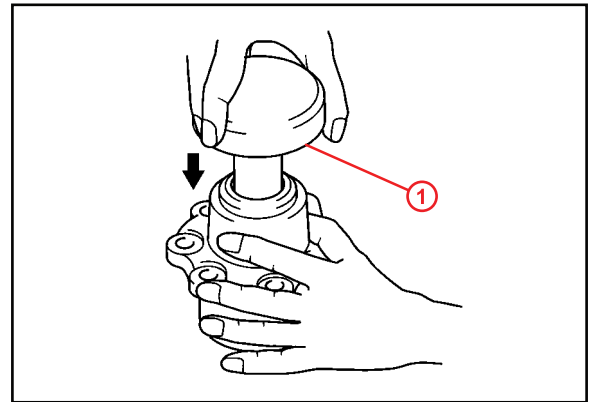

1 SST

## Transmission Fluid or Gear Oil Seepage from Transfer Case Vent (AWD)

### Repair Procedure: Installation (Continued)

- E. With the SST and the transfer RH bearing sub-assembly in close contact, install the transfer RH bearing retainer sub-assembly together with the SST into the transfer case.


#### NOTICE

- Avoid interference between the case and the retainer and between the SST and the transfer ring gear mounting case.
- Carefully check the retainer's O-ring for damage and incorrect fitting.

#### HINT

- If the engagement is tight, tap the SST with a hammer placing a brass bar on the center of the SST.
- If the SST and retainer are NOT in close contact, the seal for the inner end of the retainer may NOT be properly aligned when the retainer goes into position. This may result in the lip of the oil seal being rolled back during installation.
- If the SST and retainer are NOT in close contact, the center of the retainer or transfer ring gear mounting case may come out of position when the retainer is being installed. This can cause the lip of the oil seal to be rolled back.

Figure 19.

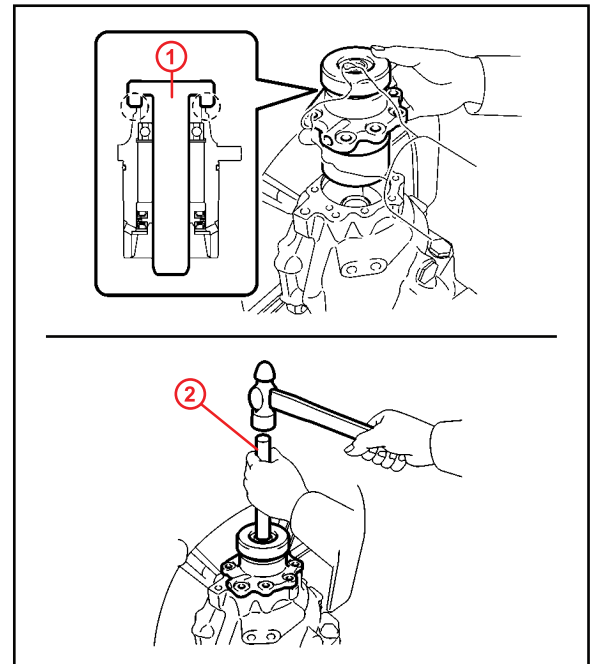

1	SST
2	Brass Bar

- F. Make sure that the transfer RH bearing retainer sub-assembly and transfer case contact closely.

## Transmission Fluid or Gear Oil Seepage from Transfer Case Vent (AWD)


---

### Repair Procedure: Installation (Continued)

- G. Tighten the 7 bolts evenly in the order shown in the illustration.


**Torque: 28 N\*m (286 kgf\*cm, 21 ft\*lbf)**

**Figure 20.**

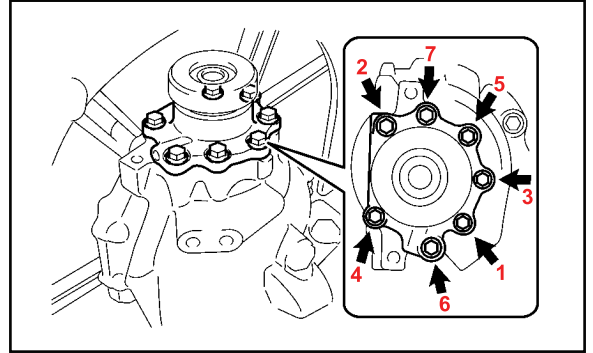

- H. Remove the SST.

**Figure 21.**

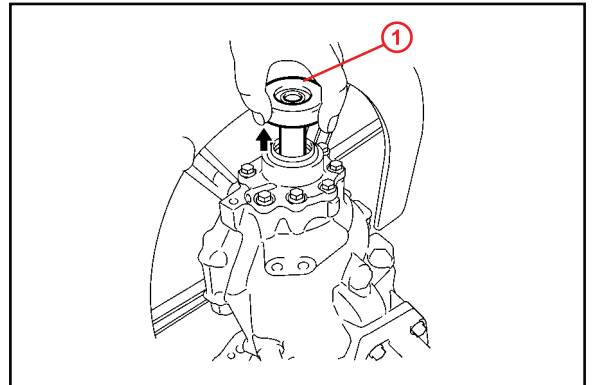

<b>1</b>	<b>SST</b>
----------	------------

## Transmission Fluid or Gear Oil Seepage from Transfer Case Vent (AWD)

### Repair Procedure: Installation (Continued)

7. Inspect total preload.

- A. Using the SST and a torque wrench, measure the initial torque between the driven pinion bearing and the ring gear face.

**SST P/N 09326-20011**

**Torque:**

**Used Bearing:**

**Driven Pinion Preload +0.15 – 0.30 N\*m  
(+1.6 – 3.1 kgf\*cm, +1.3 – 2.7 in\*lbf)**


**HINT**

Use a torque wrench with a fulcrum length of 160 mm (6.30 in.).

**NOTE**

Measure the torque after rotating the bearing in both clockwise and counterclockwise directions to make it fit.

**Figure 22.**

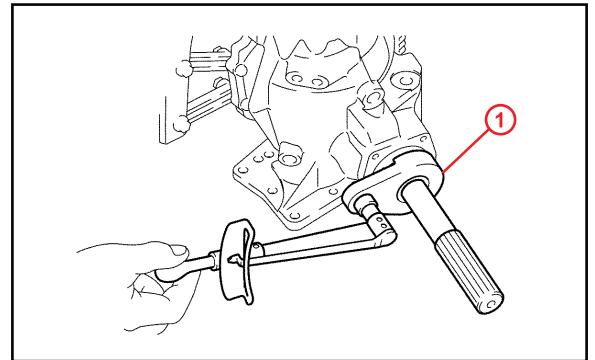

<b>1</b>	<b>SST</b>
----------	------------

- B. If the preload is too large, replace the bearing spacer with a NEW one.
- C. If the preload is too small, repeatedly adjust the preload by tightening the lock nut 5 – 10 degrees at a time until the standard value is obtained.
- D. If the preload is insufficient even though the tightening torque of the lock nut exceeds the maximum of the standard value, loosen the lock nut and apply gear oil SAE 90 (GL-5) to the lock nut and the screw thread and base of the driven pinion. Then repeat the preceding operation. If the tightening torque is smaller than the standard, replace the bearing spacer with a NEW one and adjust it.

**SST P/N 09326-20011, 09556-16030**

**Torque: 378 N\*m (3855 kgf\*cm, 279 ft\*lbf)**

## Transmission Fluid or Gear Oil Seepage from Transfer Case Vent (AWD)

### Repair Procedure: Installation (Continued)

8. Install the transfer RH bearing retainer oil seal.
  - A. Using the SST, drive the oil seal into the RH bearing retainer to the position shown in the illustration.


**SST P/N 09223-46011**

**NOTICE**

Drive in the oil seal carefully so that it will NOT be tilted.

- B. Apply MP grease to the oil seal lip.


**Figure 23.**

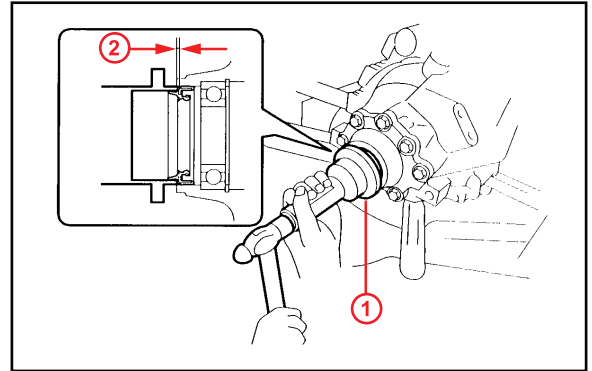

<b>1</b>	<b>SST</b>
<b>2</b>	<b>0.7 – 1.3 mm (0.028 – 0.051 in.)</b>

9. Install a NEW transfer cover gasket to the case.

**Figure 24.**

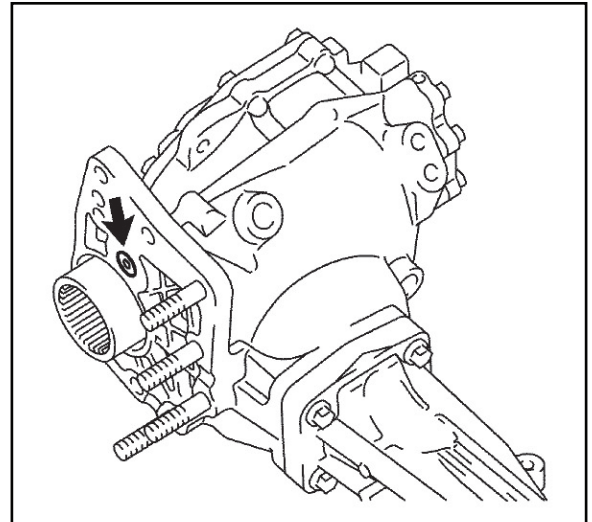

## Transmission Fluid or Gear Oil Seepage from Transfer Case Vent (AWD)

### Repair Procedure: Installation (Continued)

10. Install the transfer assembly.


- A. Apply FIPG sealant 1281 to the transaxle assembly and the transfer assembly in continuous beaded form of 1.2 mm (0.05 in.) diameter as shown in the illustration.

**FIPG sealant: Three Bond 1281, or equivalent**

**NOTICE**

- Remove any grease from the attaching surfaces.
- Install the transfer assembly **within 10 minutes** after application of the sealant.
- Sealant stuck on the gasket, case oil seal, and driving plug may cause oil leakage and seizure due to oil shortage.

Figure 25.

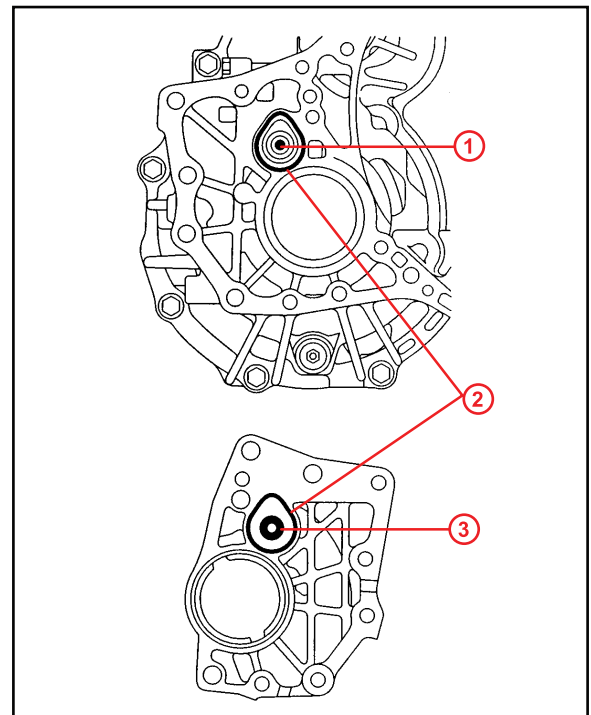

1	Driving Plug
2	Sealant
3	Gasket


- B. Install the transfer assembly to the transaxle assembly with the 2 bolts and 6 nuts.

**Torque: 69 N\*m (700 kgf\*cm, 51 ft\*lbf)**

**NOTICE**

- Check that the gasket is installed to the transfer assembly before installing it to the transaxle assembly.
- Install the transfer assembly to the transaxle assembly without tilting.
- When moving the transfer assembly, do NOT hold by the oil seals.

Figure 26.

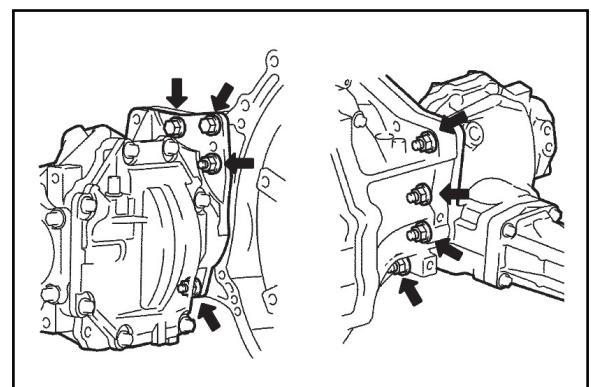

## Transmission Fluid or Gear Oil Seepage from Transfer Case Vent (AWD)

---

### Repair Procedure: Installation (Continued)

11. Install the automatic transmission w/transfer.

Refer to TIS, applicable model and model year Repair Manual:

- 2004 Highlander:  
*Drivetrain – Automatic Transmission/Transaxle – “Automatic Transaxle Assy  
[\(U151E/U151F\)](#) / [\(U241E/U140F\)](#): Replacement”*
- 2005 Highlander:  
*Drivetrain – Automatic Transmission/Transaxle – “Automatic Transaxle Assy  
[\(U151E/U151F\)](#) / [\(U241E/U140F\)](#): Replacement”*
- 2006 Highlander:  
*Drivetrain – Automatic Transmission/Transaxle – “[U140F](#) / [U151F](#) Automatic Transaxle:  
Automatic Transaxle Assembly: Installation”*
- 2007 Highlander:  
*Drivetrain – Automatic Transmission/Transaxle – “[U140F](#) / [U151F](#) Automatic Transaxle:  
Automatic Transaxle Assembly: Installation”*
- [2008](#) / [2009](#) Highlander:  
*Drivetrain – Automatic Transmission/Transaxle – “U151F Automatic Transaxle:  
Automatic Transaxle Assembly: Installation”*
- [2001](#) / [2002](#) / [2003](#) / [2004](#) / [2005](#) RAV4:  
*Drivetrain – Automatic Transmission/Transaxle – “Automatic Transaxle Unit (U140F):  
Installation”*
- [2004](#) / [2005](#) Sienna:  
*Drivetrain – Automatic Transmission/Transaxle – “Automatic Transaxle Assy (U151E/U151F):  
Replacement”*
- [2006](#) / [2007](#) / [2008](#) / [2009](#) / [2010](#) Sienna:  
*Drivetrain – Automatic Transmission/Transaxle – “U151F Automatic Transaxle: Automatic  
Transaxle Assembly: Installation”*

12. Install the engine assembly with transaxle.

Refer to TIS, applicable model and model year Repair Manual:

- 2004 Highlander:  
*Engine/Hybrid System – Engine Mechanical – “[2AZ-FE](#) / [3MZ-FE](#): Partial Engine Assy:  
Replacement”*
- 2005 Highlander:  
*Engine/Hybrid System – Engine Mechanical – “[2AZ-FE](#) / [3MZ-FE](#): Partial Engine Assy:  
Replacement”*
- 2006 Highlander:  
*Engine/Hybrid System – Engine Mechanical – “[2AZ-FE](#) / [3MZ-FE](#) Engine Mechanical:  
Engine Assembly: Installation”*


## Transmission Fluid or Gear Oil Seepage from Transfer Case Vent (AWD)

---

### Repair Procedure: Installation (Continued)

- 2007 Highlander:  
*Engine/Hybrid System – Engine Mechanical – “[2AZ-FE](#) / [3MZ-FE](#) Engine Mechanical: Engine Assembly: Installation”*
  - [2008](#) / [2009](#) Highlander:  
*Engine/Hybrid System – Engine Mechanical – “2GR-FE Engine Mechanical: Engine Assembly: Installation”*
  - [2001](#) / [2002](#) / [2003](#) / [2004](#) / [2005](#) RAV4:  
*Engine/Hybrid System – Engine Mechanical – “Engine Unit: Installation”*
  - [2004](#) / [2005](#) Sienna:  
*Engine/Hybrid System – Engine Mechanical – “Partial Engine Assy: Replacement”*
  - [2006](#) Sienna:  
*Engine/Hybrid System – Engine Mechanical – “3MZ-FE Engine Mechanical: Engine Assembly: Installation”*
  - [2007](#) / [2008](#) / [2009](#) / [2010](#) Sienna:  
*Engine/Hybrid System – Engine Mechanical – “2GR-FE Engine Mechanical: Engine Assembly: Installation”*
13. Install the transfer drain plug with a NEW gasket.  
**Torque: 49 N\*m (500 kgf\*cm, 36 ft\*lbf)**

**Figure 27.**

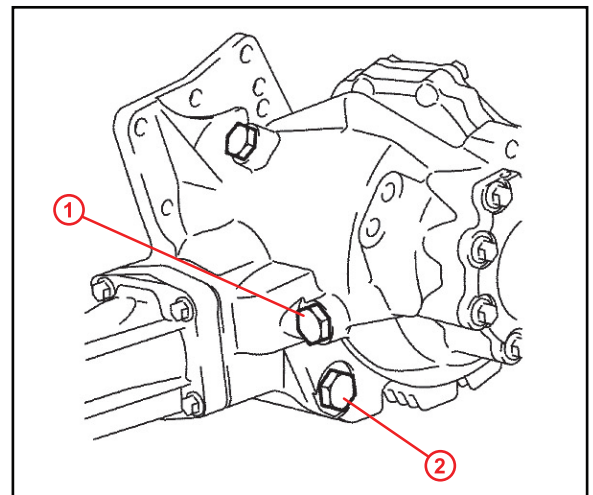

<b>1</b>	<b>No. 1 Plug</b>
<b>2</b>	<b>Drain Plug</b>

## Transmission Fluid or Gear Oil Seepage from Transfer Case Vent (AWD)

---

### Repair Procedure: Installation (Continued)

14. Install the transfer case No. 1 plug.

A. Add oil up to the level 0 – 5 mm (0 – 0.20 in.) below the lowest end of the plug hole.

**Oil quantity:**

**0.95 U.S. qts (0.9 L, 0.71 Imp. qts)**

**NOTE**

**Add oil slowly.**

B. Install the No. 1 plug with a NEW gasket.

**Torque: 49 N\*m (500 kgf\*cm, 36 ft\*lbf)**

15. Inspect and adjust front wheel alignment.

Refer to TIS, applicable model and model year Repair Manual:

- [2004](#) / [2005](#) Highlander:  
*Suspension – Alignment/Handling Diagnoses – “Front Wheel Alignment: Adjustment”*
- [2006](#) / [2007](#) / [2008](#) / [2009](#) Highlander:  
*Suspension – Alignment/Handling Diagnoses – “Suspension: Front Wheel Alignment: Adjustment”*
- [2001](#) / [2002](#) / [2003](#) / [2004](#) / [2005](#) RAV4:  
*Suspension – Alignment/Handling Diagnoses – “Front Wheel Alignment: Inspection”*
- [2004](#) / [2005](#) Sienna:  
*Suspension – Alignment/Handling Diagnoses – “Front Wheel Alignment: Adjustment”*
- [2006](#) / [2007](#) / [2008](#) / [2009](#) / [2010](#) Sienna:  
*Suspension – Alignment/Handling Diagnoses – “Suspension: Front Wheel Alignment: Adjustment”*

16. Check the ABS speed sensor signal (ABS with EBD & BA & TRAC & VSC system).

Refer to TIS, applicable model and model year Repair Manual:

- [2004](#) / [2005](#) Highlander:  
*Brake – Brake Control/Dynamic Control System – “ABS With EBD & BA & TRAC & VSC System: Pre-Check”*
- [2006](#) / [2007](#) / [2008](#) / [2009](#) Highlander:  
*Brake – Brake Control/Dynamic Control System – “Brake Control: Vehicle Stability Control System: Test Mode Procedure”*
- [2001](#) / [2002](#) / [2003](#) / [2004](#) / [2005](#) RAV4:  
*Brake – Brake Control/Dynamic Control System – “Anti-Lock Brake System With Electronic Brake Force Distribution (EBD): Pre-Check”*

## Transmission Fluid or Gear Oil Seepage from Transfer Case Vent (AWD)

---

### Repair Procedure: Installation (Continued)

- [2004](#) / [2005](#) Sienna:  
*Brake – Brake Control/Dynamic Control System – “ABS With EBD & BA & TRAC & VSC System: Pre-Check”*
  - [2006](#) / [2007](#) / [2008](#) / [2009](#) / [2010](#) Sienna:  
*Brake – Brake Control/Dynamic Control System – “Brake Control: Anti-lock Brake System: Test Mode Procedure”*
17. Re-initialize any affected power systems.
- Refer to TIS for the applicable TSB or Repair Manual section.