



Technical Service BULLETIN



March 19, 1999

Title:
WIRELESS DOOR LOCK BUZZER
Models:
'99 4Runner

TSB

ELECTRICAL
EL002-99

Introduction This TSB describes the procedure to adjust the volume of the buzzer used for audible confirmation of Wireless Door Lock and rear power window down operation.

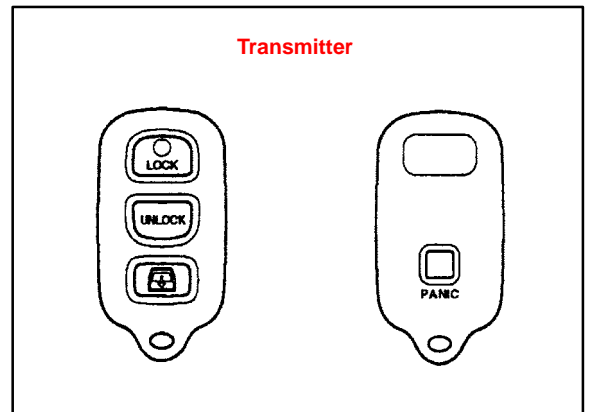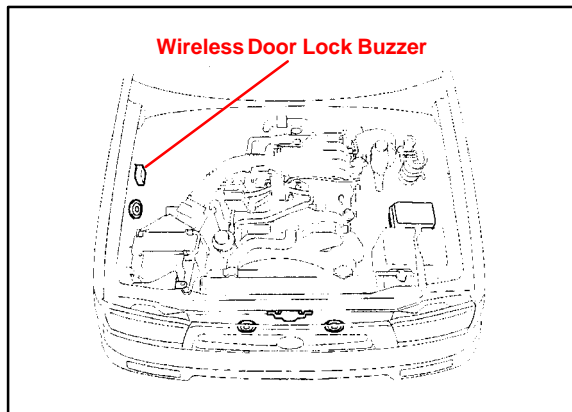

Affected Vehicles

- 1999 MY 4Runners equipped with OEM Wireless Door Locks (4 Button Remote)

Adjustment Procedure

The volume of the buzzer can be selected between levels 1 through 5. Level 3 is the standard setting.

To Adjust Buzzer Volume

1. Have the key out of the ignition switch and any door(s) open.
2. Depress and continue to hold down the **UNLOCK** button on a remote. Initially, the power door locks will activate to unlock and the taillights will flash twice. After 5 seconds, the buzzer will sound twice to signal entering the adjustment mode
3. Keeping the unlock button depressed, depress then release either the:
 - **LOCK** button to adjust the **volume up** or
 - **BACK WINDOW** button for **volume down**.

For each activation of the lock or back window button, the buzzer will sound once and the volume will change 1 level. Once level 1 or 5 is achieved, each button activation only results in the buzzer sounding once.

4. Release the **UNLOCK** button when the desired volume level is selected. The buzzer will then sound twice to signal exiting the adjustment mode.

Warranty Information

OP CODE	DESCRIPTION	TIME	OPN	T1	T2
N/A	Not applicable to warranty	-	-	-	-

