


**4RUNNER FRONT MUDGUARD INSTALLATION INSTRUCTIONS**

A front mudguard kit is now available for installation on 1989 through 1995 4Runners. Please make sure all attachment areas are clean and follow the installation process outlined below.

**INSTALLATION PROCEDURE:**


**Front Mudguards**

1. Remove capnut, from the stud on the rocker, which is at the base of the front edge, at point "A". Retain capnut for re-installation (see Figure 1).

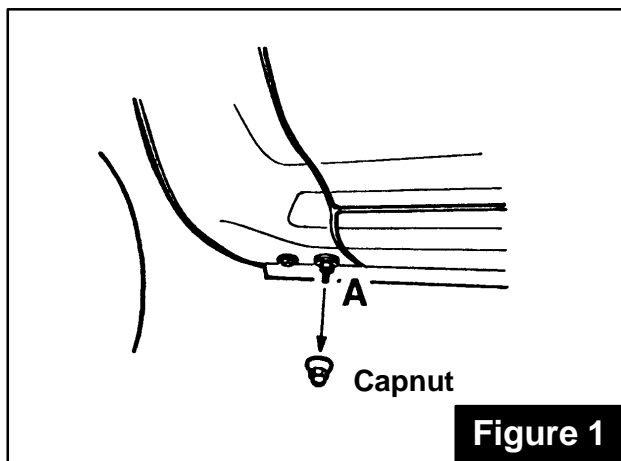

**Figure 1**

2. Take out 3 body molding screws which secure the fender well trim molding and liner, at points 1, 2 and 3. Retain screws for re-installation (see Figure 2).

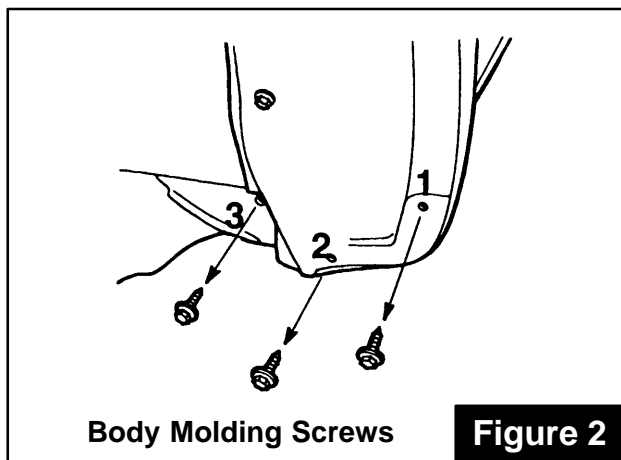


**Figure 2**


## 4RUNNER FRONT MUDGUARD INSTALLATION INSTRUCTIONS

Page 2 of 2

3. Re-using capnut, install the mudguard on the stud at point "A", while holding mudguard against the body to insure proper fit and tighten down (see Figure 3)

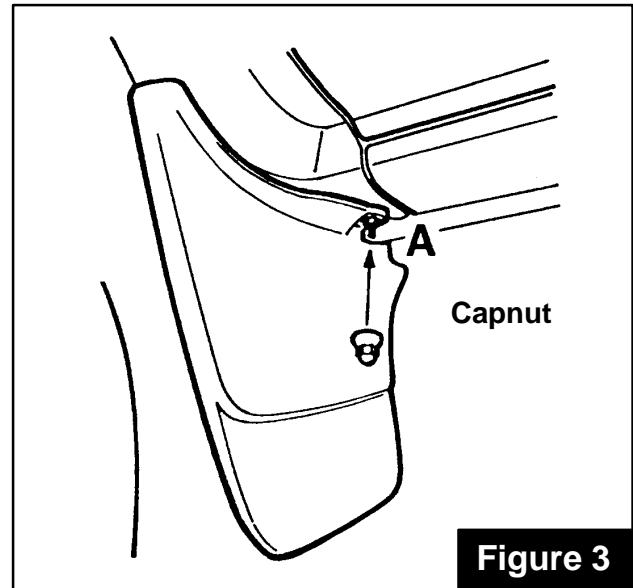

4. Re-using body molding screws, install mudguard at point 1, 2, and 3 while holding the mudguard against the body to insure proper fit and tighten (see Figure 4).

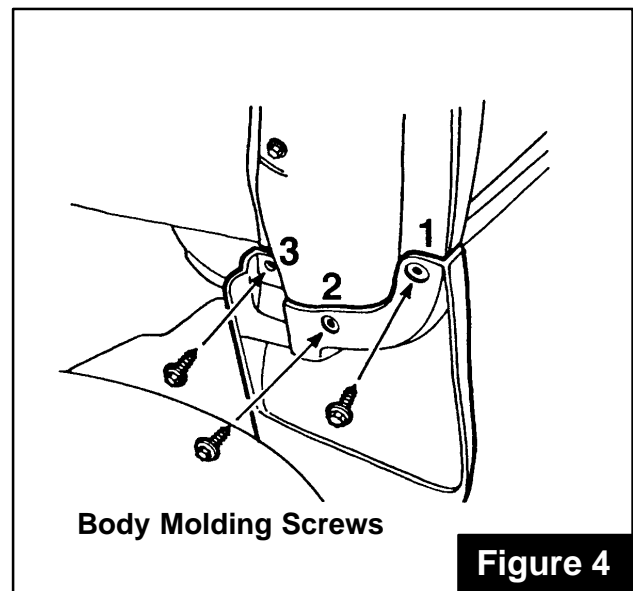

### TOOLS REQUIRED:

- ✓ Square Drive Ratchet
- ✓ 10 Millimeter Socket

### PART INFORMATION:

PART NUMBER	PART NAME
76603-39015	4Runner Front Mudguard, RH
76604-39015	4Runner Front Mudguard, LH