

Part Number: PT420-00045

NOTE: Part number of this accessory may not be the same as the part number shown.

Kit Contents

Item #	Quantity Reqd.	Description
1	1	Emergency Assistance Kit (EAK)
2	1	Tether Strap, Heavy Duty P/N: PT420-08040
3		

Vehicle Service Parts (may be required for reassembly)

Item #	Quantity Reqd.	Description
1		
2		
3		


Hardware Bag Contents


Item #	Quantity Reqd.	Description
1		
2		


Additional Items Required For Installation


Item #	Quantity Reqd.	Description
1		
2		
3		


Legend

 **STOP:** Damage to the vehicle may occur. Do not proceed until process has been complied with.

 **OPERATOR SAFETY:** Use caution to avoid risk of injury.

 **CAUTION:** A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.

 **TOOLS & EQUIPMENT:** Used in Figures calls out the specific tools and equipment recommended for this process.

 **REVISION MARK:** This mark highlights a change in installation with respect to previous issue.

Conflicts

Note: None

Recommended Tools

Personal & Vehicle Protection	Notes
None	
Special Tools	Notes
None	
Installation Tools	Notes
None	
Special Chemicals	Notes
None	

General Applicability

Note: All Toyota Vehicles

Recommended Sequence of Application

Item #	Accessory
1	
2	
3	

*Mandatory

Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.


These guidelines can be found in the "Accessory Installation Practices" document.

This document covers such items as:-

- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
- Safety (eye protection, rechecking torque procedure, etc.).
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.).
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).

Please see your Toyota dealer for a copy of this document.


NOTES: "EAK" denotes Emergency Assistance Kit
Included strap is for end-user to secure EAK as applicable.

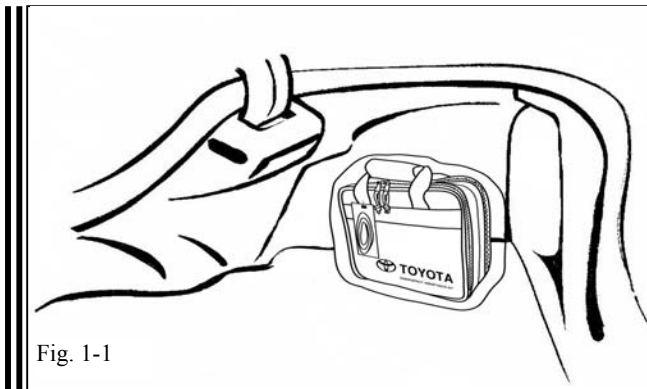

1. Install Emergency Assistance Kit.

(A) Cars / SUVs / VAN:

- (1) Place the EAK in the right rear corner of the trunk / cargo area of the vehicle. (Do not remove EAK from package). (Fig. 1-1)

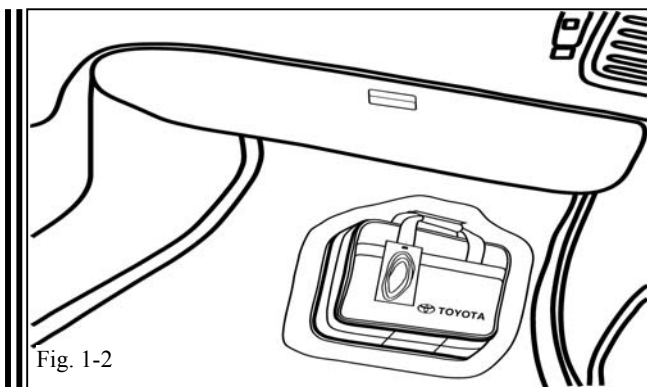

(B) Trucks:

- (1) Place the EAK on the right / front floor of the vehicle. (Do not remove EAK from package). (Fig. 1-2)

Checklist - these points **MUST** be checked to ensure a quality installation.

Check:

Look For:

Accessory Function Checks

- Confirm proper placement of Emergency Assistance Kit.

Whenever possible, "Toyota" name is visible and upright.

Vehicle Function Checks

-