

Front Fender Liner Pin Hold Clip Removal / Installation Procedures

Service Category Vehicle Exterior

Section Exterior Panels/Trim

Market USA

Toyota Supports
 ASE Certification 

Applicability

YEAR(S)	MODEL(S)	ADDITIONAL INFORMATION
2005 – 2008	Avalon	
2007 – 2009	Camry HV	
2007 – 2009	Camry	
2009	Corolla	
2009	Matrix	
2004 – 2008	Solara	
2005 – 2008	Tacoma	
2007 – 2008	Tundra	

Introduction

To prevent damage to the front fender liner, the following procedure should be used when removing and installing the front fender liner pin hold clip.

Parts Information

PREVIOUS PART NUMBER	CURRENT PART NUMBER	PART NAME
47749-08010	Same	Clip, Pin Hold

Warranty Information

OP CODE	DESCRIPTION	TIME	OFF	T1	T2
N/A	Not Applicable to Warranty	–	–	–	–


Front Fender Liner Pin Hold Clip Removal / Installation Procedures

Removal Procedure

NOTE

- Upper and lower pin hold clips are used for 2007-2008 Tundra (w/ Resin Front Bumper)
- This Procedure is not applicable to 2007-2008 Tundra (w/ Steel Front Bumper) as this type of clip is not used on those vehicles.

1. Using a screwdriver, rotate the pin hold clip 90° degrees, so the slot is aligned horizontally.

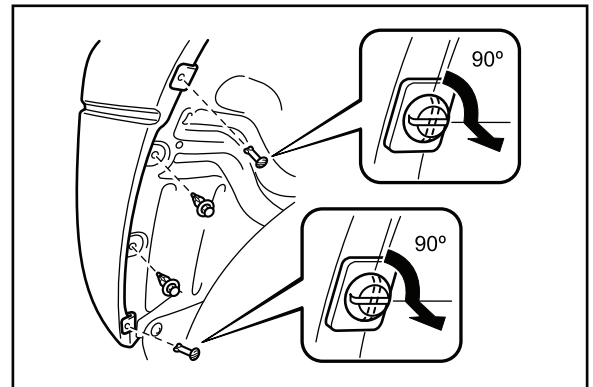Figure 1.


2. Pull clip out to remove.

Front Fender Liner Pin Hold Clip Removal / Installation Procedures

Installation Procedure

1. Insert the pin hold clip with the slot aligned vertically.

Figure 2.

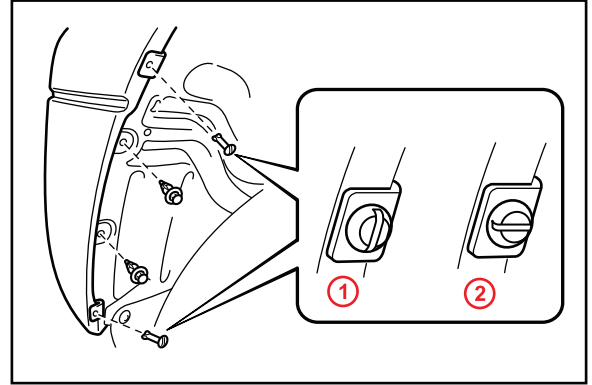

1	Correct
2	Incorrect

2. AFTER Installation confirm that the slot is vertical.

NOTE

- **DO NOT** rotate the clip after inserting it.
- Use same procedure for the upper and lower clips (If present) on both the RH and LH side.