

TOYOTA TECHNICAL SERVICE BULLETIN

REF.: SPECIAL SERVICE TOOLS
NO.: SS94-003
DATE: AUGUST 12, 1994
MODEL: ALL MODELS

TOYOTA CHECKER APPLICATIONS (REFERENCE GUIDE)

ABS CHECKER: '88-'94 MODELS

Page 1 of 9



MODEL	MODEL YEAR	SUB-WIRE HARNESS & OVERLAY	
		SUB-WIRE HARNESS	OVERLAY SHEET
Cressida	89-92	Harness "A"	Sheet "A"
Supra w/TRAC	88-92	Harness "A"	
	93-94	Harness "E," "G" & "H"	
w/o TRAC	93-94	Harness "E" & "C"	
Camry	88-91	Harness "A"	
	92-94 (JPP)	Harness "C" & "E"	
Celica	88-89	Harness "A"	
	90-93	Harness "C" & "A"	
	94	Harness "G," "I" & "L"	
Corolla	93-94	Harness "C" & "I"	
MR2	91-94	Harness "A"	
Tercel	93-94	Harness "C" & "I"	
Paseo	93-94	Harness "C" & "I"	
Previa	91-93	Harness "A"	
	94	Harness "E" & "C"	
Land Cruiser	93-94	Harness "C" & "E"	
Truck, T100, 4Runner w/ Rear Wheel ABS	90-94	Harness "D"	
4Runner w/ 4 Wheel ABS	94	Harness "C" & "E"	Sheet "L"

TOYOTA CHECKER APPLICATIONS (REFERENCE GUIDE)**ABS CHECKER SUB-WIRE HARNESS AND OVERLAY SHEET PART NUMBERS:**

SUB-WIRE HARNESS	PART NUMBER	OVERLAY SHEET	PART NUMBER
A	09990-00165	A	09990-00163
C	09990-00200	L	09990-00370
D	09990-00205		
E	09990-00210		
G	09990-00250		
H	09990-00280		
I	09990-00300		
L	09990-00370		

CRUISE CONTROL CHECKER: '87-'93 MODELS

MODEL	MODEL YEAR	ENGINE MODEL	SUB-HARNESS & OVERLAY	
			SUB-HARNESS	OVERLAY SHEET
Cressida	87-88	7M-GE	No. 8	No. 3
	89-90	7M-GE	No. 5	No. 3
	91-92	7M-GE	No. 11	No. 21
Supra	87-90	7M-GE, 7M-GTE	No. 2	No. 6
	91-92	7M-GE, 7M-GTE	No. 6	No. 22
	93	7M-GE, 7M-GTE	No. 2	No. 22
Camry	87-91	3S-FE, 2VZ-FE	No. 8	No. 3
	92-93	5S-FE, 3VZ-FE	No. 10	No. 23
Celica	87-89	3S-GTE, 3S-GE W/ABS	No. 6	No. 6
	87-89	3S-FE	No. 6	No. 5
	90	5S-FE (GT)	No. 6	No. 19
	90	5S-FE, 3S-GTE (GTS)	No. 1	No. 18
	91-93	5S-FE, 3S-GE (VACUUM)	No. 2	No. 5
	91-93	5S-FE, 3S-GTE (MOTOR)	No. 1	No. 17
	93	4A-FE	No. 2	No. 19
Corolla	87	4A-F, 4A-GE (FR)	No. 7	No. 8
	87-92	4A-F, 4A-FE, 4A-GE (FF)	No. 8	No. 8
	93	4A-FE, 7A-FE	No.10	No. 23
FX	87-88	4A-F	No. 8	No. 8
FX16	87-88	4A-GE	No. 8	No. 3
MR2	87-90	4A-GE, 4A-GZE	No. 8	No. 7
	91-92	5S-FE, 3S-GTE	No. 10	No. 7
	93	5S-FE, 3S-GTE	No. 10	No. 23
Tercel	87-90	3E, 3E-E	No. 8	No.9


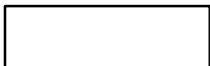


TOYOTA CHECKER APPLICATIONS (REFERENCE GUIDE)**CRUISE CONTROL CHECKER: '87-'93 MODELS (CONT.)**

MODEL	MODEL YEAR	ENGINE MODEL	SUB-HARNESS & OVERLAY	
			SUB-HARNESS	OVERLAY SHEET
Paseo	92-93	5E-FE	No. 10	No. 23
Van	87-89	4Y-E	No. 3	No. 10
Truck 4x2	87-88	22R-E, 22R-TE	No. 8	No. 11
	89-93	22R-E	No. 4	No. 14
	89-93	3VZ-FE	No. 4	No. 13
Truck 4x4	87-88	22R-E, 22R-TE	No. 8	No. 12
	89-93	22R-E, 3VZ-E	No. 4	No. 13
4 Runner	87-89	22R-E, 3VZ-FE	No. 8	No. 12
	90-93	22R-E	No. 4	No. 14
	90-93	3VZ-FE	No. 4	No. 13
Land Cruiser	91-92	3F-E	No. 10	No. 20
	93	1FZ-FE	No. 10	No. 23
Previa	91-93	2TZ-FE	No. 10	No. 17

CRUISE CONTROL CHECKER SUB-HARNESS PART NUMBERS:

SUB-HARNESS	PART NO.
No. 1	09991-03510
No. 2	09991-03520
No. 3	09991-03530
No. 4	09991-03540
No. 5	09991-03550
No. 6	09991-03560
No. 7	09991-03570
No. 8	09991-03580
No. 10	09991-03600
No. 11	09991-03610





TOYOTA CHECKER APPLICATIONS (REFERENCE GUIDE)**CRUISE CONTROL CHECKER OVERLAY PART NUMBERS:**

OVERLAY SHEET	PART NO.	OVERLAY SHEET	PART NO.
No. 3	09991-03030	No. 13	09991-03130
No. 4	09991-03040	No. 14	09991-03140
No. 5	09991-03050	No. 17	09991-03170
No. 6	09991-03060	No. 18	09991-03180
No. 7	09991-03070	No. 19	09991-03190
No. 8	09991-03080	No. 20	09991-03200
No. 9	09991-03090	No. 21	09991-03210
No. 10	09991-03100	No. 22	09991-03220
No. 11	09991-03110	No. 23	09991-03230
No. 12	09991-03120		

ECT CHECKER: '83-'94 MODELS:

MODEL	MODEL YEAR	ENGINE MODEL	ECT SUB-WIRE & OVERLAY	
			SUB-HARNESS	OVERLAY SHEET
Cressida	83-88	5M-GE	Not Required	Std
	89-92	7M-GE	Not Required	
Supra	83-86	5M-GE	Not Required	Std
	86 ^{1/2} -92	7M-GE	Not Required	
	87-92	7M-GTE	Not Required	
	93-94	2JZ-GE	Previa / T100	
Camry	83-86	2S-E	Not Required	Std
	88-81	2VZ-FE	Not Required	
	87-91	3S-FE	Not Required	
	All-Trac	3S-FE	88 FX, 87 / 88 AW	
	92-93	3VZ-FE	92 Camry 3VZ-FE V-6 / MR2	
	92-94	5S-FE	92 Camry 5S-FE 4 Cyl	
Celica	86	2S-E	Not Required	Std
	86-89	3S-GE	Not Required	
	87-89	3S-FE	Not Required	
	90-93	5S-FE	92 Camry 3VZ-FE V-6 / MR2	
	94	5S-FE	92 Camry 5S-FE 4 Cyl	
Corolla	93-94	7A-FE	92 Camry 3VZ-FE V-6 / MR2	Std



TOYOTA CHECKER APPLICATIONS (REFERENCE GUIDE)**ECT CHECKER: '83-'94 MODELS (CONT.)**



MODEL	MODEL YEAR	ENGINE MODEL	ECT SUB-WIRE & OVERLAY	
			SUB-HARNESS	OVERLAY SHEET
MR2	86	4A-GE	Not Required	Std
	87-89	4A-GE	88 FX, 87 / 88 AW	
	88-89	4A-GZE	88 FX, 87 / 88 AW	
	91-94	5S-FE	92 Camry 3VZ-FE V-6 / MR2	
Paseo	92-94	5E-FE	92 Camry 3VZ-FE V-6 / MR2	Std
Truck	85-87	22R-TE	Not Required	4WD, RN
	85-91	22R-E	Not Required	4WD, RN
	88-94	3VZ-E	Not Required	4WD, RN
	92-94	22R-E	Previa / T100	Std
4Runner	85-91	22R-E	Not Required	4WD, RN
	85-87	22R-TE	Not Required	4WD, RN
	88-94	3VZ-E	Not Required	4WD, RN
	92-94	22R-E	Previa / T100	Std
Land Cruiser	93-94	1FZ-FE	93 Land Cruiser	Std
T100	93-94	3VZ-E	Previa / T100	Std
Previa	91-94	2TZ-FE	Previa / T100	Std

ECT CHECKER SUB-WIRE HARNESS PART NUMBERS:

NAME OF SUB-WIRE HARNESS	PART NO.
ECT Sub-Wire: 88 FX, 87 / 88 AW	00002-00851
ECT Sub-Wire: 87 FX	00002-00852
ECT Sub-Wire: 92 Camry 3VZ-FE V-6/MR2 5S-FE	00002-00853
ECT Sub-Wire: Previa / T100	00002-00854
ECT Sub-Wire: 92 Camry 5S-FE 4 Cyl	00002-00855
ECT Sub-Wire: 93 Land Cruiser	00002-00856



ECT CHECKER OVERLAY PART NUMBER:

NAME OF OVERLAY	PART NO.
4WD, RN	00002-04300



TOYOTA CHECKER APPLICATIONS (REFERENCE GUIDE)**TCCS: '86-'93 MODELS**



MODEL	MODEL YEAR	ENGINE MODEL	SUB-WIRE HARNESS
Cressida	86-88	5M-GE	No. 11
	89-92	7M-GE	No. 13
Supra	86	5M-GE	No. 11
	86 ^{1/2} -92	7M-GE	No. 8
	87-88	7M-GTE	No. 8
	89-92	7M-GTE	No. 13
Camry	86	2S-E	No. 4
	87	3S-FE	No. 3
	88 ^{1/2} -91	2VZ-FE	No. 2
	88-91	3S-FE W/O ECT	No. 3
	88-91	3S-FE W/ECT	No. 3
	92-93	3VZ-FE W/ECT	No. 32
	92-93	3VZ-FE M/T	No. 32
	92-93	5S-FE W/ECT	No. 33
Celica	86	2S-E	No. 4
	86, 88-89	3S-GE	No. 9
	87-89	3S-FE	No. 3
	87	3S-GE	No. 9
	88 ^{1/2} -89	3S-GTE	No. 9
	90-91	3S-GTE	No. 20
	92-93	3S-GTE	No. 37
	90-91	5S-FE W/O ECT	No. 19
	92	5S-FE W/O ECT	No. 34
	90-92	5S-FE W/ECT	No. 22
	90-93	4A-FE	No. 23
	93	5S-FE W/ECT	No. 33
	93	5S-FE M/T	No. 34
	Corolla, FX	86-89	4A-GE
88 ^{1/2} -89		4A-FE	No. 7
90-92		4A-FE	No. 23
90-91		4A-GE	No. 25
93		4A-FE M/T, A/T	No. 34
93		7A-FE M/T	No. 34
MR2	86-89	4A-GE	No. 5
	88-89	4A-GZE	No. 9
	91-92	3S-GTE	No. 20
	91-92	5S-FE M/T	No. 19
	91-92	5S-FE ECT	No. 22
	93	3S-GTE	No. 37
	93	5S-FE ECT	No. 33
	93	5S-FE M/T	No. 34



TOYOTA CHECKER APPLICATIONS (REFERENCE GUIDE)



TCCS: '86-'93 MODELS (CONT.)

MODEL	MODEL YEAR	ENGINE MODEL	SUB-WIRE HARNESS
Paseo	92	5E-FE M/T	No. 29
	93	5E-FE M/T	No. 29
	92-93	5E-FE ECT	No. 30
Tercel	90	3E-E A/T	No. 7
	91	3E-E	No. 29
	92-93	5E-E M/T	No. 29
	92-93	5E-E A/T	No. 30
Van	86-89	4Y-E	No. 4
Truck	86-88	22R-E	No. 6
	86-88	22R-TE	No. 6
	88 ^{1/2}	3VZ-E	No. 12
	89-91	22R-E W/O ECT	No. 6
	89-92	22R-E W/ECT	No. 14
	89	3VZ-E (ECU 89661-35190)	No. 12
	89	3VZ-E (Except ECU 89661-35190)	No. 15
	90	3VZ-E M/T Fed (Except C&C)	No. 12
	90	3VZ-E M/T Cal (Except C&C)	No. 15
	90	3VZ ECT, C&C	No. 15
	90	22R-E (4x2) Fed, Cal.	No. 28
	91-93	3VZ-E	No. 15
	91-92	22R-E W/O ECT	No. 28
	93	22R-E M/T (4x4)	No. 25
93	22R-E (4x2)	No. 38	
93	22R-E (4x4) W/ECT	No. 43	
4-Runner	86-89	22R-E	No. 6
	86-87	22R-TE	No. 6
	88-89	3VZ-E	No. 12
	91	22R-E (4x2) Fed, Cal.	No. 28
	90-91	22R-E W/O ECT	No. 6
	90-93	22R-E W/ECT	No. 14
	90	3VZ-E M/T Fed (Except C&C)	No. 12
	90	3VZ-E M/T Cal (Except C&C)	No. 15
	90	3VZ-E ECT, C&C	No. 15
	91-93	3VZ-E	No. 15
	92	22R-E W/O ECT	No. 28
	93	22R-E M/T	No. 25
Land Cruiser	90	3F-E	No. 10
	91-92	3F-E	No. 24
	93	1FZ-FE	No. 41
T-100	93	3VZ-E	No. 1
Previa	91-93	2TZ-FE	No. 21



TOYOTA CHECKER APPLICATIONS (REFERENCE GUIDE)**TCCS CHECKER SUB-HARNESS PART NUMBERS:**

SUB-WIRE HARNESS	PART NO.	SUB-WIRE HARNESS	PART NO.
No. 2	09991-01120	No. 21	09991-01310
No. 3	09991-01130	No. 22	09991-01320
No. 4	09991-01140	No. 23	09991-01330
No. 5	09991-01150	No. 24	09991-01340
No. 6	09991-01160	No. 25	09991-01350
No. 7	09991-01170	No. 28	09991-01380
No. 8	09991-01180	No. 29	09991-01390
No. 9	09991-01190	No. 30	09991-01400
No. 10	09991-01200	No. 32	09991-01420
No. 11	09991-01210	No. 33	09991-01430
No. 12	09991-01220	No. 34	09991-01440
No. 13	09991-01230	No. 37	09991-01470
No. 14	09991-01240	No. 38	09991-01480
No. 15	09991-01250	No. 41	09991-01510
No. 19	09991-01290	No. 43	09991-01530
No. 20	09991-01300		



TOYOTA CHECKER APPLICATIONS (REFERENCE GUIDE)**THEFT DETERRENT SYSTEM: '85-'93 MODELS**

MODEL	MODEL YEAR	ENGINE MODEL	SUB-HARNESS & OVERLAY	
			SUB-HARNESS	OVERLAY SHEET
Cressida	85	5M-GE	No. 2	No. 3
	86-87	5M-GE	No. 3	No. 4
	88	5M-GE	No. 4	No. 5
	89-92	7M-GE	No. 5	No. 6
Supra	85-86	5M-GE	No. 2	No. 7
	86-87	7M-GE	No. 3	No. 8
	88-92	7M-GE	No. 4	No. 9
MR2	91-93	5S-FE, 3S-GTE	No. 5	No. 13
Previa	91-92	2TZ-FE	No. 1	No. 1
	92-93	2TZ-FE	No. 1	No. 12

THEFT DETERRENT SYSTEM PART NUMBERS:

SUB-HARNESS & OVERLAY		OVERLAY PART NUMBERS	
SUB-HARNESS	PART NO.	OVERLAY SHEET	PART NO.
No. 1	09991-04511	No. 1	09991-04010
No. 2	09991-04520	No. 3	09991-04030
No. 3	09991-04530	No. 4	09991-04040
No. 4	09991-04540	No. 5	09991-04050
No. 5	09991-04550	No. 6	09991-04060
		No. 7	09991-04070
		No. 8	09991-04080
		No. 9	09991-04090
		No. 12	00991-04120
		No. 13	09991-04130

