

TOYOTA

SERVICE BULLETIN

TOYOTA MOTOR SALES, U.S.A., INC.

VOLUME
VIII

REFERENCE	PRODUCT GENERAL INFORMATION
NUMBER	041
DATE	02-27-87
MODEL	ALL MODELS

Page 1 of 3

1987 MAINTENANCE SCHEDULE

Since 1986, the majority of Toyota models have a uniform 10,000 miles/12 months maintenance schedule making it simpler for everyone to remember when required maintenance is due.

For the following 1987 models, the normal (Minimum) scheduled maintenance interval will be as follows:

GROUP ONE-PASSENGER CARS AND 4X2 TRUCKS

Maintenance service, including oil and filter change, is required every 10,000 miles or 12 months, whichever occurs first.

- (1) AL Tercel with 3A-C Engine
- (2) EL Tercel with 3E-C Engine
- (3) AE FWD Corolla with 4A-LC Engine
- (4) AE FWD Corolla (FX) with 4A-GE and 4A-LC Engines
- (5) AE RWD Corolla with 4A-C Engine
- (6) AE RWD Corolla with 4A-GE Engine
- (7) ST Celica with 3S-FE Engine
- (8) ST Celica with 3S-GEL Engine
- (9) MA Supra with 7M-GE Engine
- (10) SV Camry with 3S-GEL Engine
- (11) AW MR2 with 4A-FE Engine
- (12) MX Cressida with 5M-GE Engine
- (13) YR Van with 4Y-E Engine
- (14) RN 4x2 Trucks with 22R and 22R-E Engines

However, the maintenance intervals for the following models are different from above models due to the unique nature of the engine and/or chassis system:

GROUP TWO - Exceptions

Oil change every 5,000 miles or six months, oil and oil filter change every 10,000 miles or 12 months, chassis related maintenance every 20,000 miles or 24 months, and engine related maintenance every 30,000 miles or 36 months, whichever occurs first.



- (15) MA - Supra with 7M-GTE Gasoline Turbo Engine
- (16) RN - 4X2 Trucks with 22R-TE Gasoline Turbo Engine

1987 MAINTENANCE SCHEDULE (Cont'd)

For your convenience and quick reference, a 1987 Maintenance Schedule Chart is listed below:
REQUIRED MINIMUM MAINTENANCE SCHEDULE FOR ALL MODELS

X 1,000 Miles Months	05	10	15	20	25	30	35	40	45	50	55	60
	06	12	18	24	30	36	42	48	54	60	66	72
(1) AL Tercel (3A-C) (2) EL Tercel (3E) (3) FWD Corolla (4A-LC) (5) RWD Corolla (4A-C) (7) Celica (3S-FE) (9) Supra (7M-GE) (10) Camry (3S-FE) (12) Cressida (5M-GE) (14) 4x2 Trucks (22R)		O		OC		OE		OC		O		OM
(4) FX Corolla (4A-GE) (6) RWD Corolla (4A-GE) (8) Celica (3S-GE) (11) MR2 (4A-GE) (14) 4X2 Truck (22R-E) (13) Van (4Y-E)		Om		OC		OE		OC		O		OM
(15) Supra (7M-GTE)	o	O	o	OC	o	OE	o	OC	o	O	o	OM
(16) 4X2 Truck (22R-TE)	o	Om	o	OC	o	OE	o	OC	o	O	o	OM
(17) 4X4 Truck (22R)		O	C	O		OM		O	C	O		OM
(17) 4X4 Truck (22R-E)		Om	C	O		OM		O	C	O		OM
(18) Landcruiser (2F)		O	M	O		OM		O	M	O		OM
(19) 4X4 Truck (22R-TE)	o	Om	oC	O	o	OM	o	O	oC	O	o	OM

- o = Oil change only, no filter change
- O = Oil and filter change
- m = Inspect idle speed
- M = Regular Maintenance (Engine and Chassis related maintenance)
- C = Chassis related maintenance
- E = Engine related maintenance

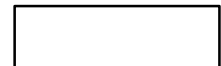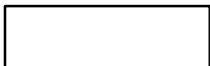

1987 MAINTENANCE SCHEDULE (Cont'd)

GROUP TWO – Exceptions (Cont'd)

Oil and filter change every 10,000 miles or 12 months, engine related maintenance every 30,000 miles or 36 months, and chassis related maintenance every 15,000 miles or 18 months, whichever occurs first.

(17) RN – 4X4 Trucks with 22R and 22R–E Engine

(18) FJ – Landcruiser with 2F Engine which requires valve clearance inspection at every 15,000 miles or 18 months, whichever occurs first.

Oil change every 5,000 miles or 6 months, oil and oil filter every 10,000 miles or 12 months, engine related maintenance every 30,000 miles or 36 months and chassis related maintenance every 15,000 miles or 18 months, whichever occurs first.

(19) RN – 4x4 Trucks with 22R–TE Gasoline Turbo Engine

SEVERE SERVICE REQUIREMENTS

Several items require more frequent service under severe driving conditions as described in both the Owners Manuals and Repair Manuals. The guidelines for which maintenance schedule to follow – severe or normal – is shown below and in all 1987 Owner's manuals.

WHICH SCHEDULE TO FOLLOW?

If you mainly operate your vehicle under one or more of the conditions below:

- Towing a trailer, using a camper or car top carrier
- Operating on dusty, rough, muddy or salt-sprayed roads.
- Repeated short trips less than 5 miles (8 km) and outside temperatures remain below freezing
- Extensive idling and/or low speed driving for a long distance such as police, taxi or door-to-door delivery use

Follow
SEVERE
schedule

If you mainly operate your vehicle under:

CONDITIONS OTHER THAN THOSE LISTED ABOVE

Follow
NORMAL
schedule